 
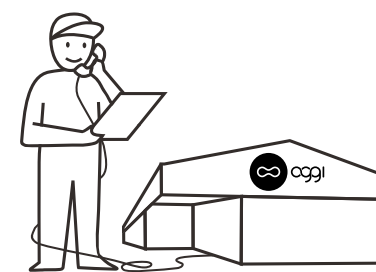 
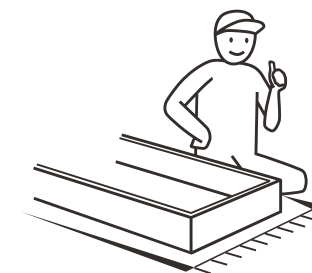 
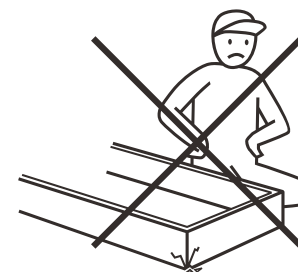 
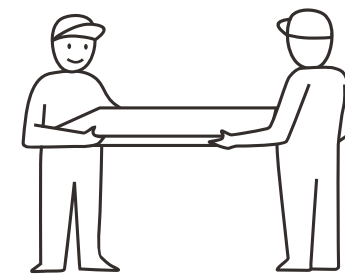 



 
 

 
 
 
 
 



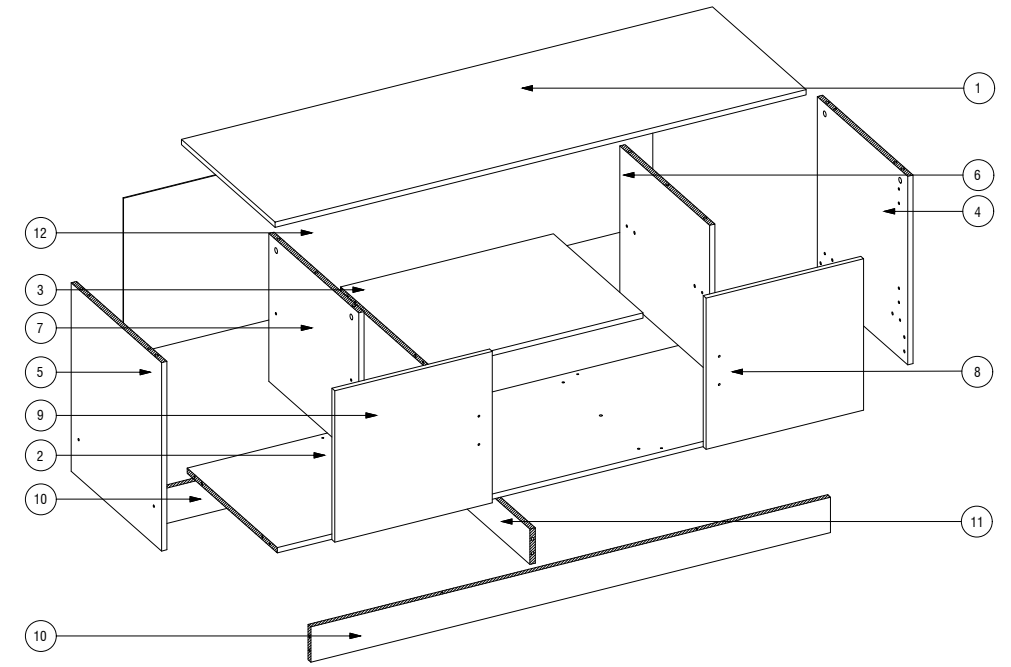 
ASSEMBLING INSTRUCTION

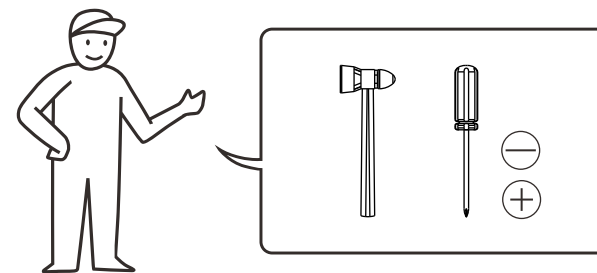

SHIRO TV RACK 120

WHITE - TUSCANY OAK



<p>010801</p>  <p>8 X</p>	<p>010701</p>  <p>8 X</p>	<p>010501</p>  <p>28 X</p>	<p>011402</p>  <p>12 X Ø10 MM X 1 3/4"</p>	<p>011601</p>  <p>4 X Ø6 MM X 1 1/2"</p>	<p>011704</p>  <p>16 X Ø6 X 1/2"</p>
<p>011707</p>  <p>16 X Ø6 X 5/8"</p>	<p>020305</p>  <p>4 X</p>	<p>060136</p>  <p>2 X</p>	<p>100905</p>  <p>2 X</p>	<p>100901</p>  <p>2 X</p>	<p>011002</p>  <p>12 gr</p>



 
 X 1 ± 60 M 

010701



8 X
ø6 MM X 1 1/2"

011601




4 X

010501



 4 X

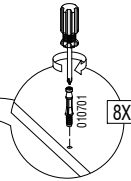


8 X

010501




6 X
ø10 MM X 1 3/4"

 011402



8 X

 1

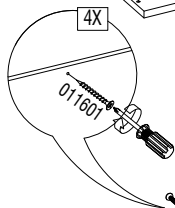

4 X

011601

 
10

2

11

2

10




010501

4 X

05

 3



010501

6 X

10

 
7

3

6

2

10

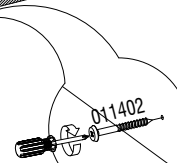

011402

8 X

 
06

010501




12X

011402




4X

 100905



2X

 100901



2X

011707



16X

Ø10 MM X 1 3/4"

Ø6 X 5/8"

010501



 
6X

010801




8X


4

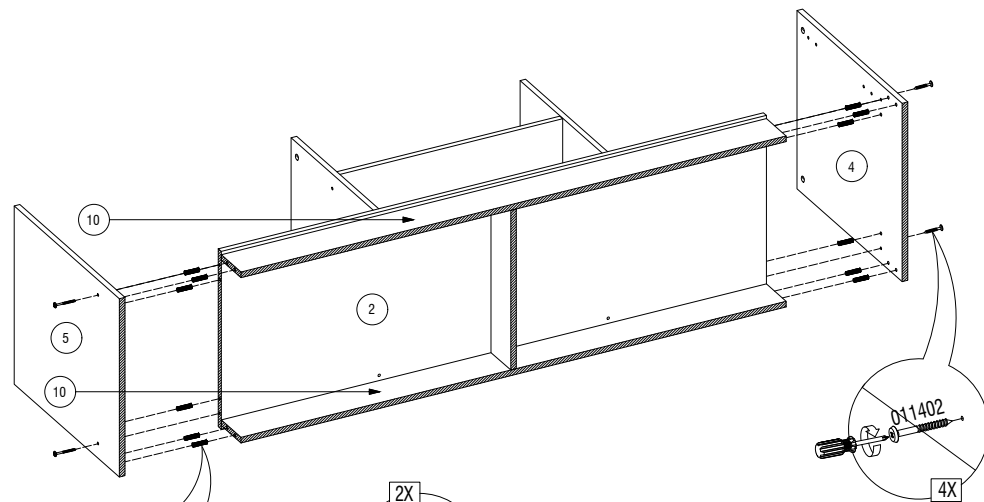

5

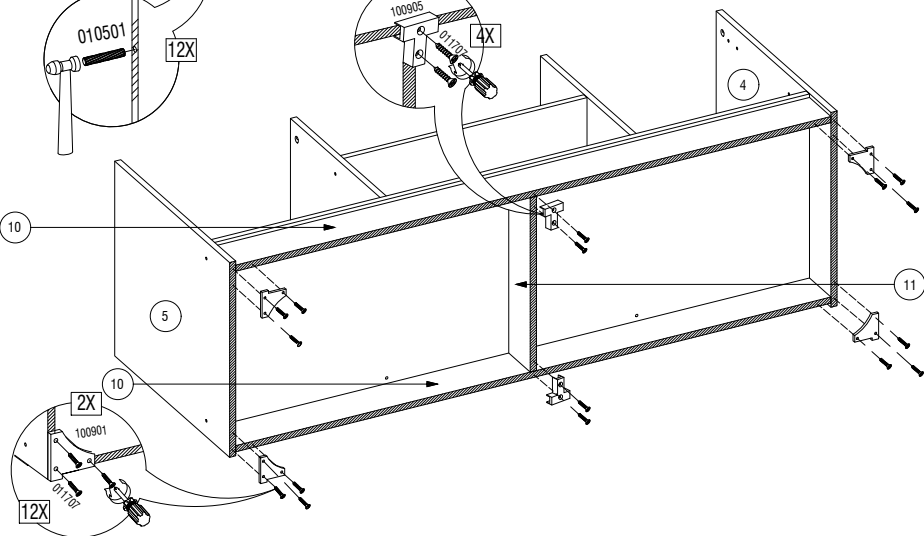 


6

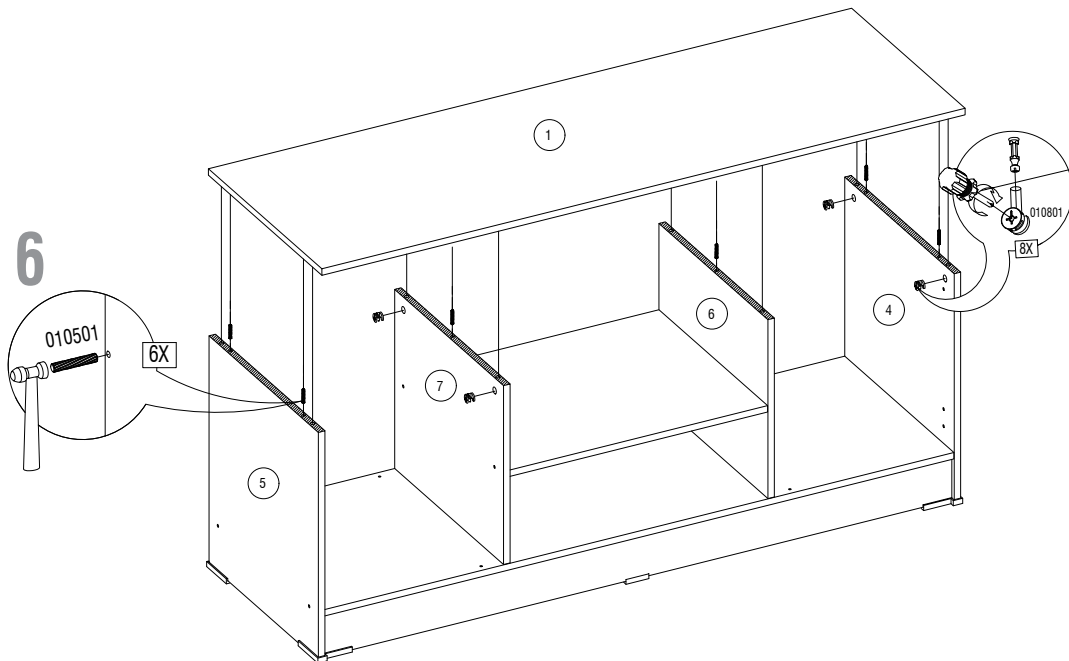 

011704

020305

 060136




Ø6 X 1/2"

16 X

4 X

2 X

 7

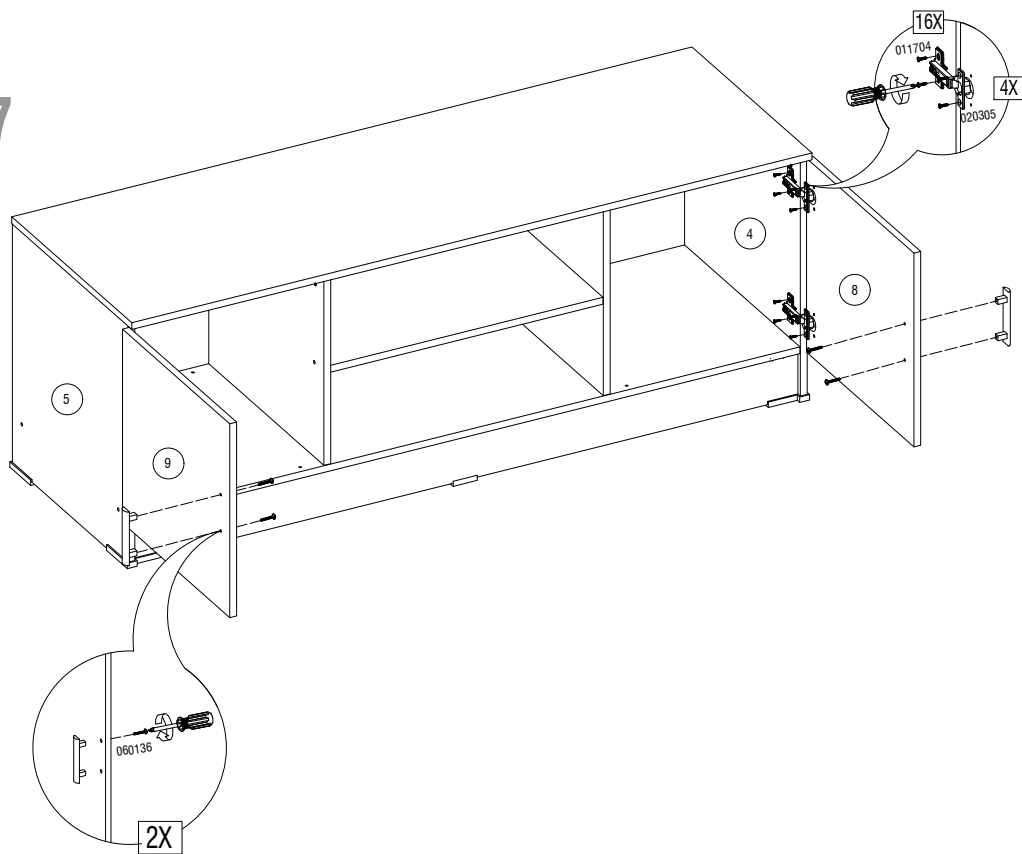


09

011002




12 gr

 8

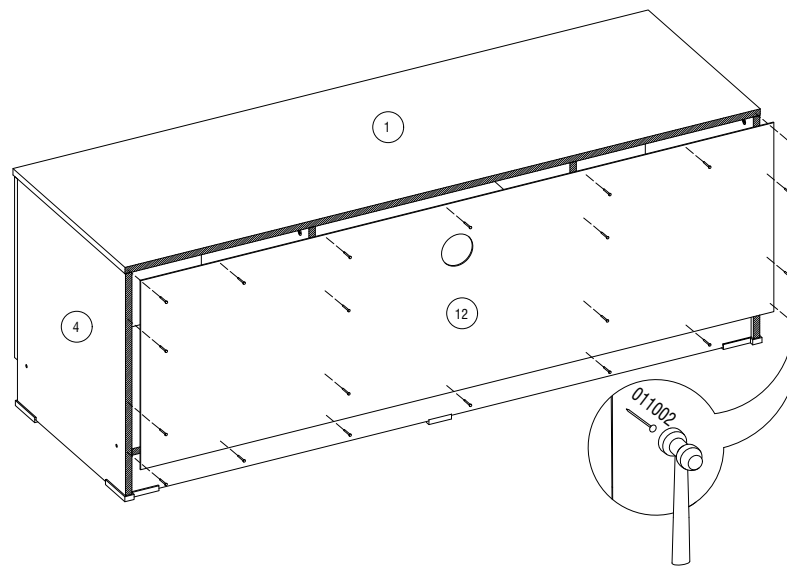

9

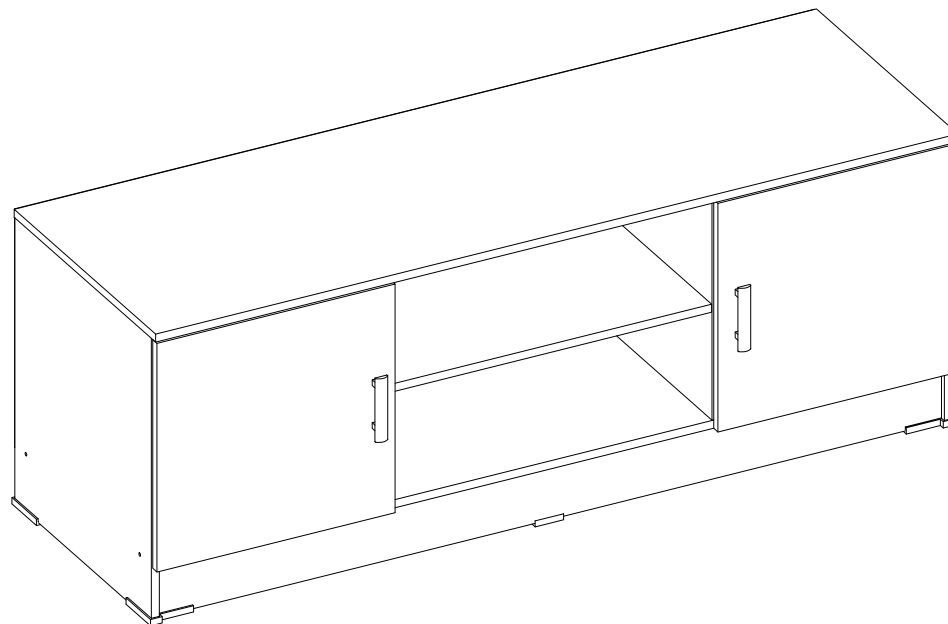 

10