
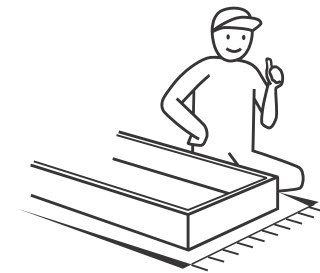
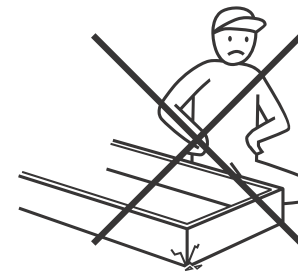
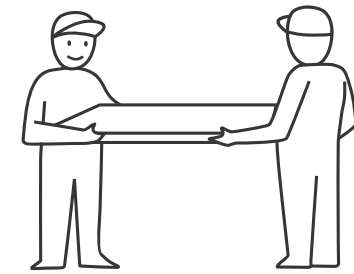












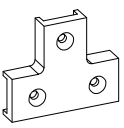



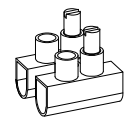



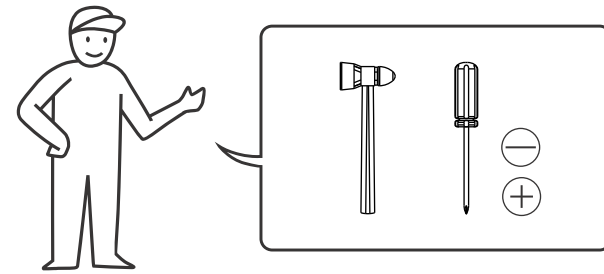


ASSEMBLING INSTRUCTION

BERLIN DIVIDER 150


RUSTIC OAK - CANYON OAK




 Ø15 MM X 12 MM 24 X	 Ø8 MM X 30 MM 24 X	 Ø8 MM X 30 MM 62 X	 Ø 12 MM X 1 3/4" 38 X	 Ø 6 MM X 1/2" 64 X	 Ø 6 MM X 5/8" 18 X
 Ø4 MM X 10 MM 2 X	 FULL OVERLAY 8 X	 8 X	 16 X	 2 X	 8 X
 15 MM 2 X	 15 MM 12 X	 1 X	 3 M' 3 M'	 1 X	 1 X
 BLACK 18 X	 19 X	 1 X			

 **KODE BT & BT1 DAPAT BERUPA STIKER DENGAN WARNA MENYESUAIKAN FOIL**


 X 2  ±90 M

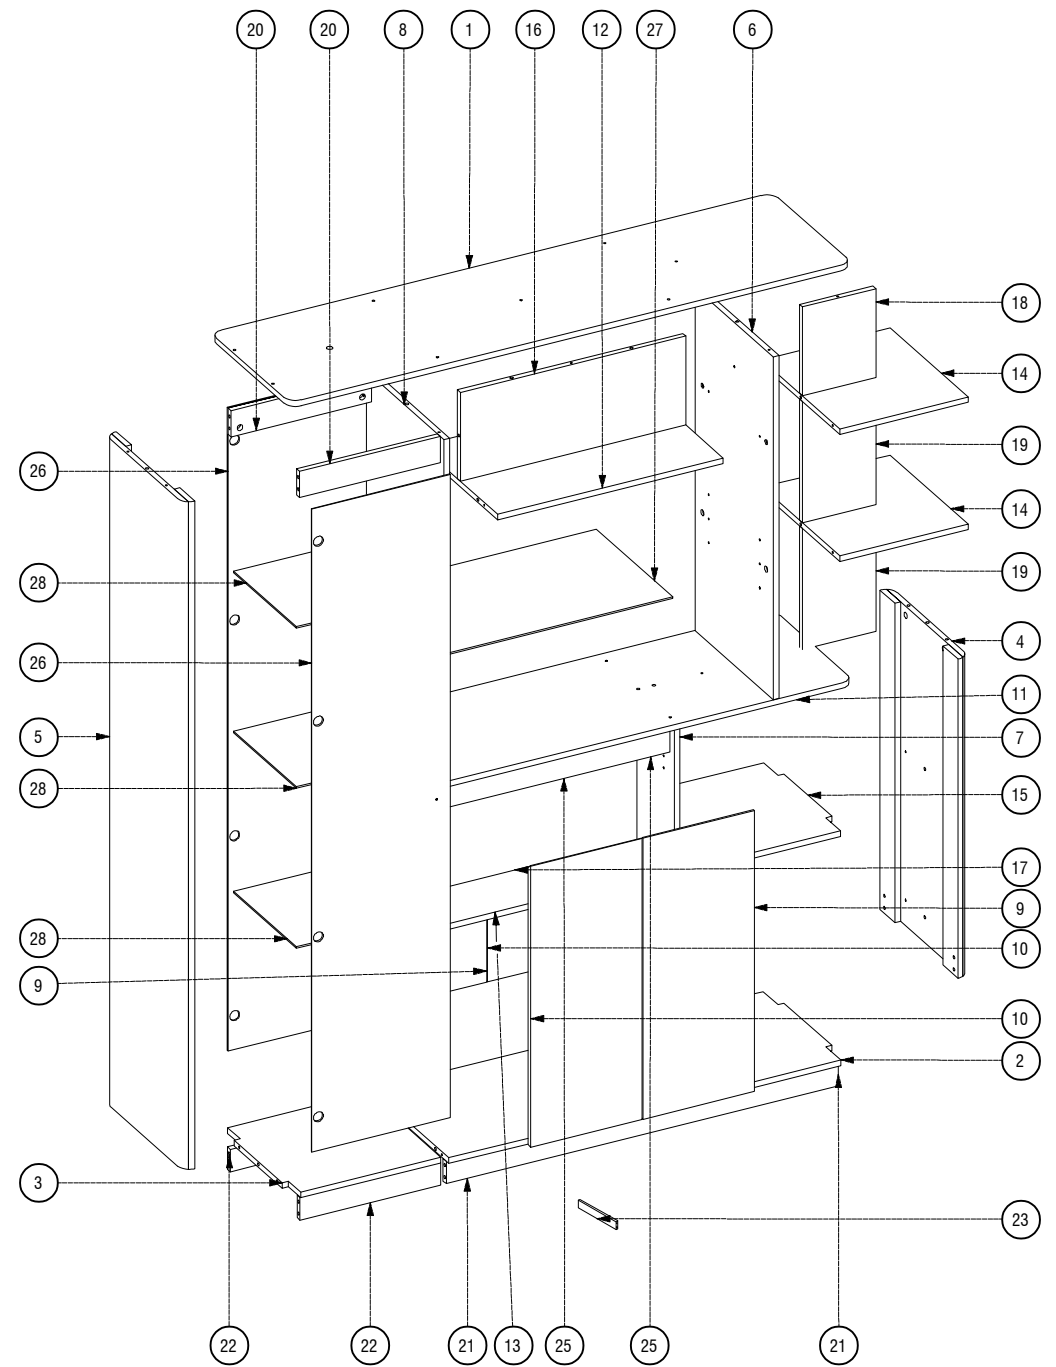

1

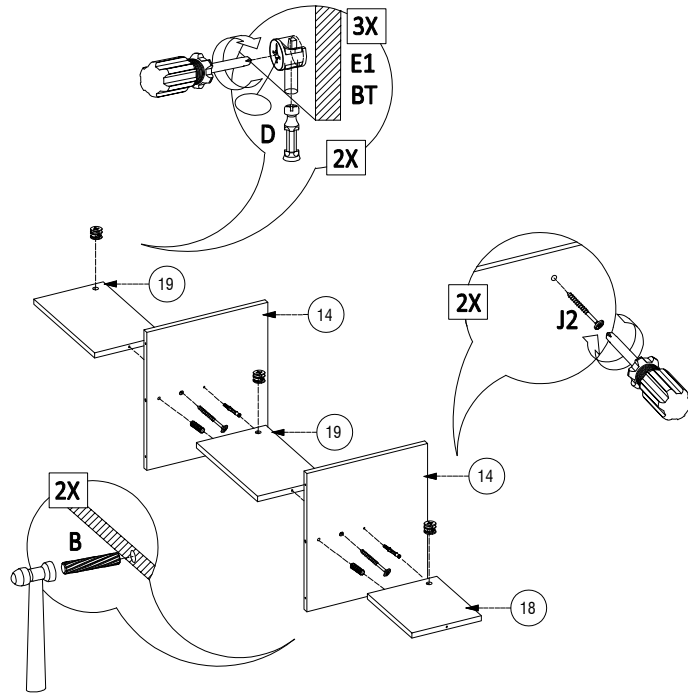


2

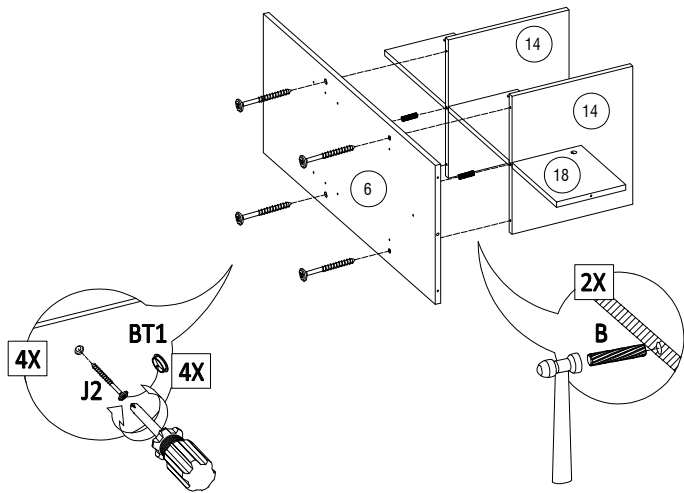


05

3

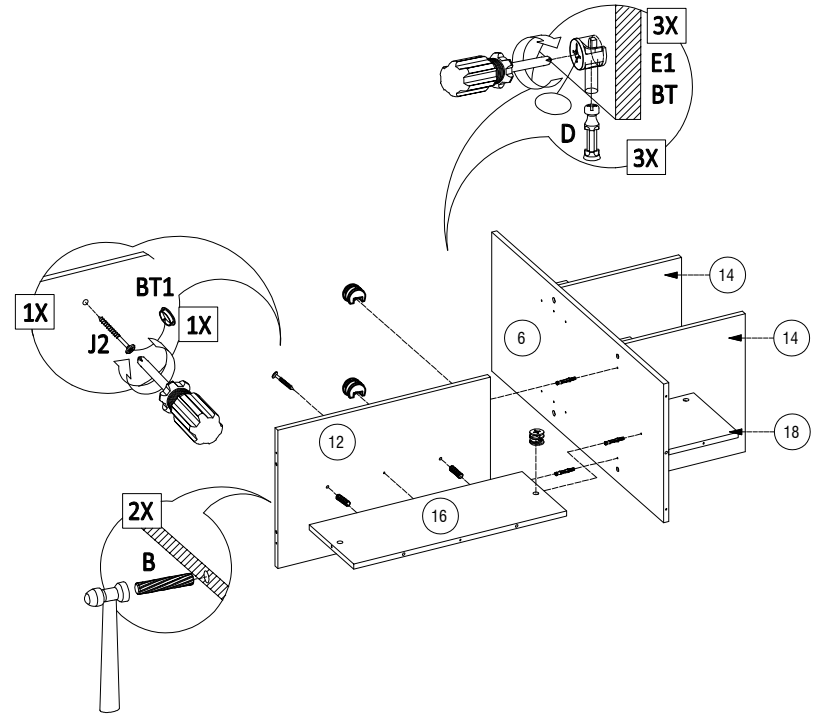


4

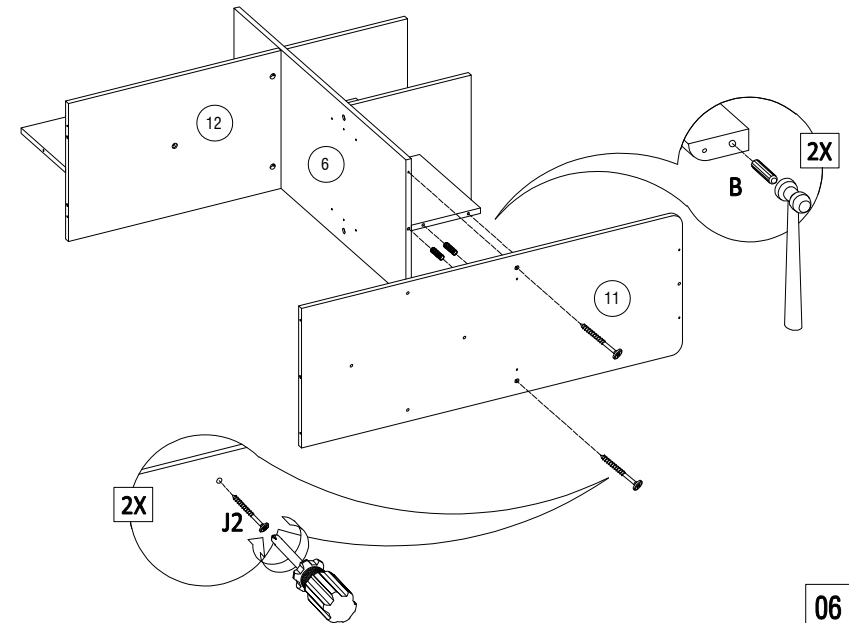


06

5

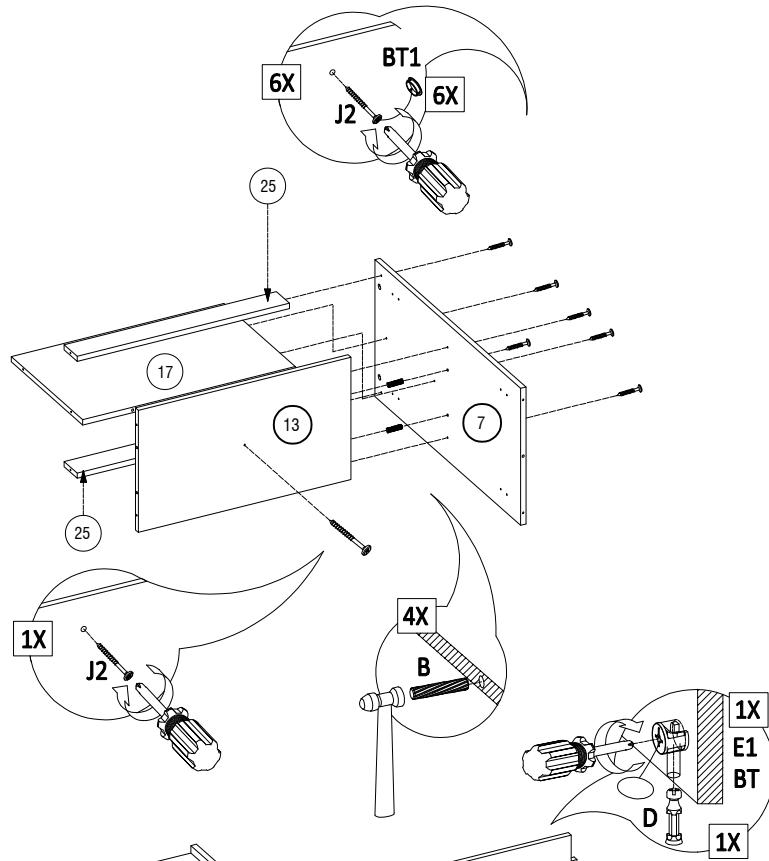


6

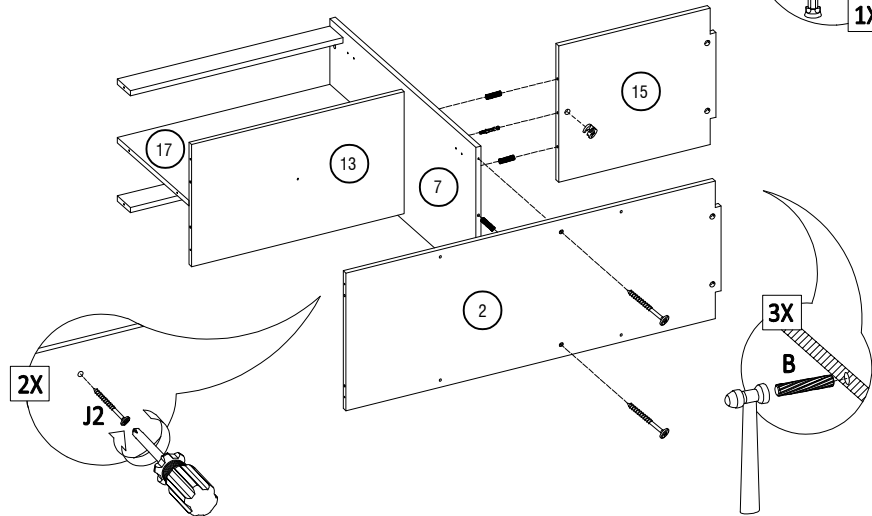


07

7



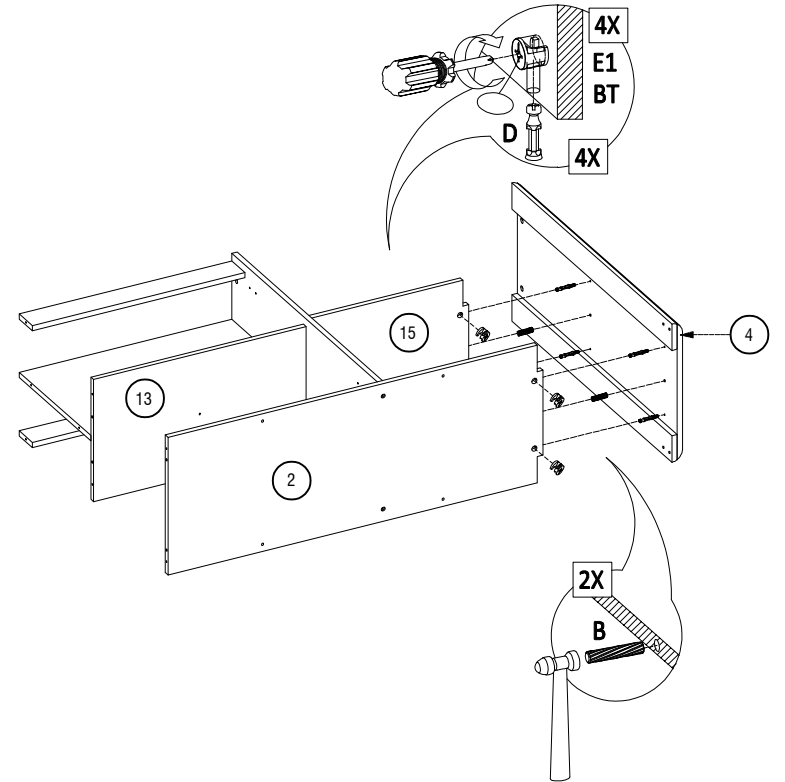


8

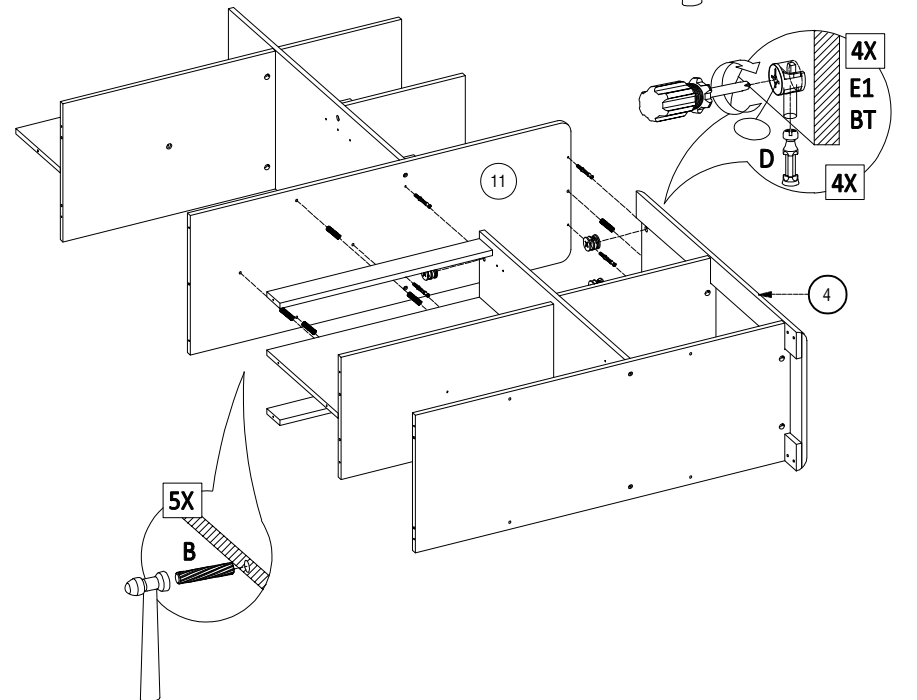




08

9

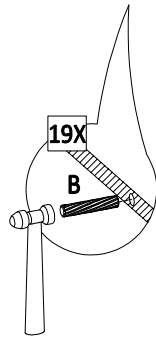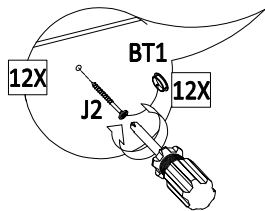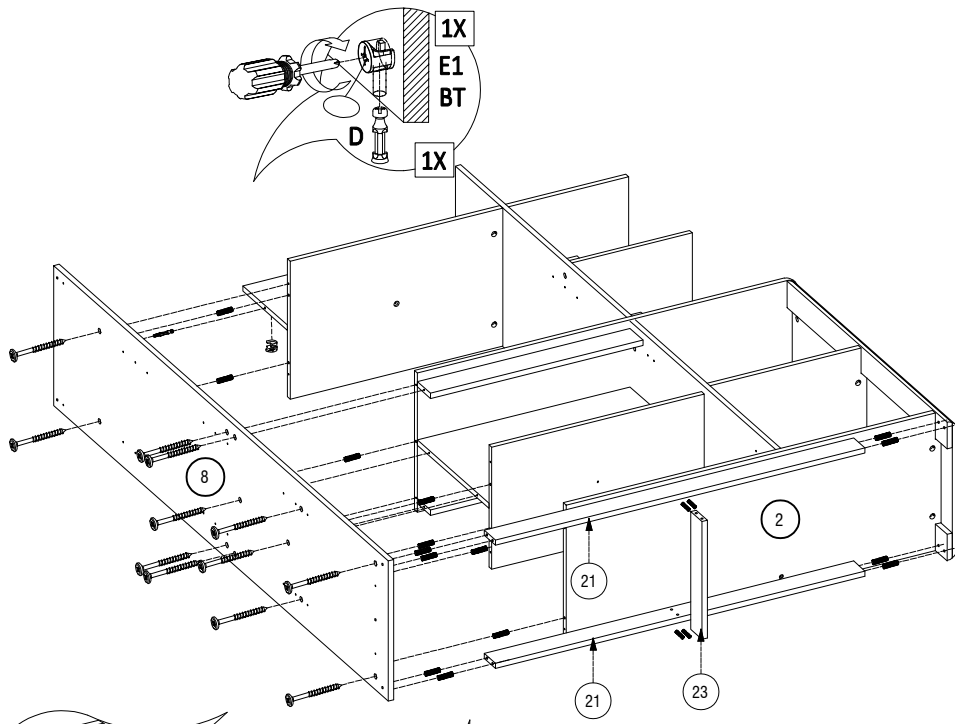



09

10

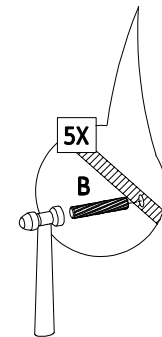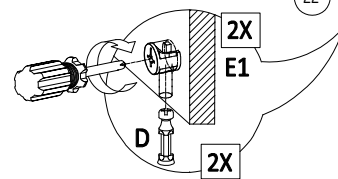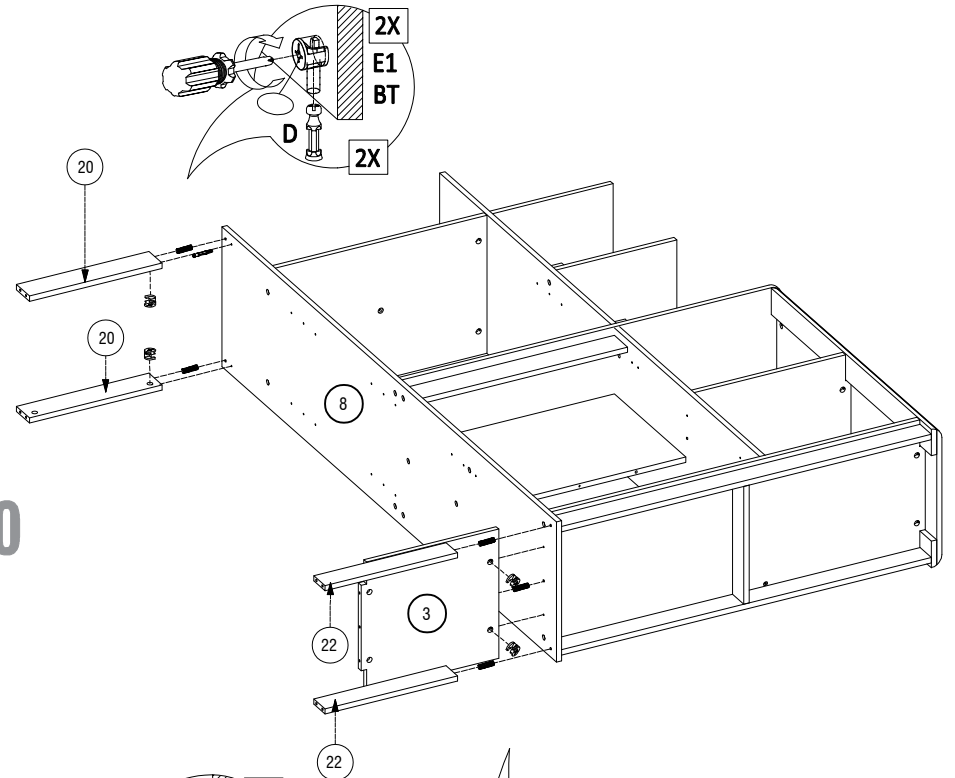


10

11

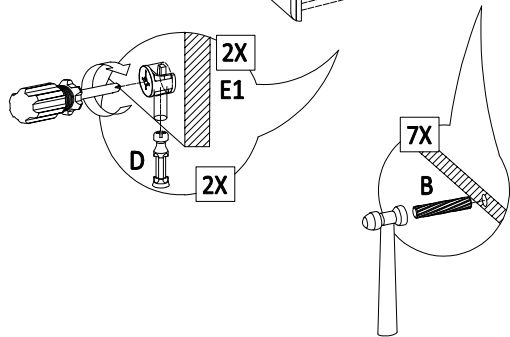
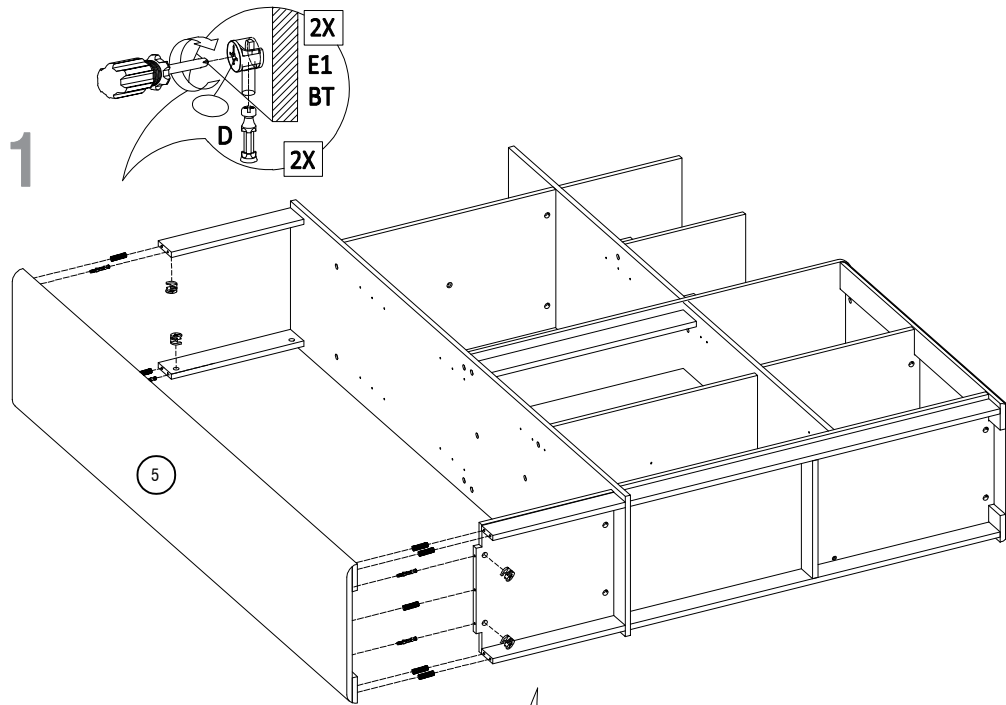


11


12

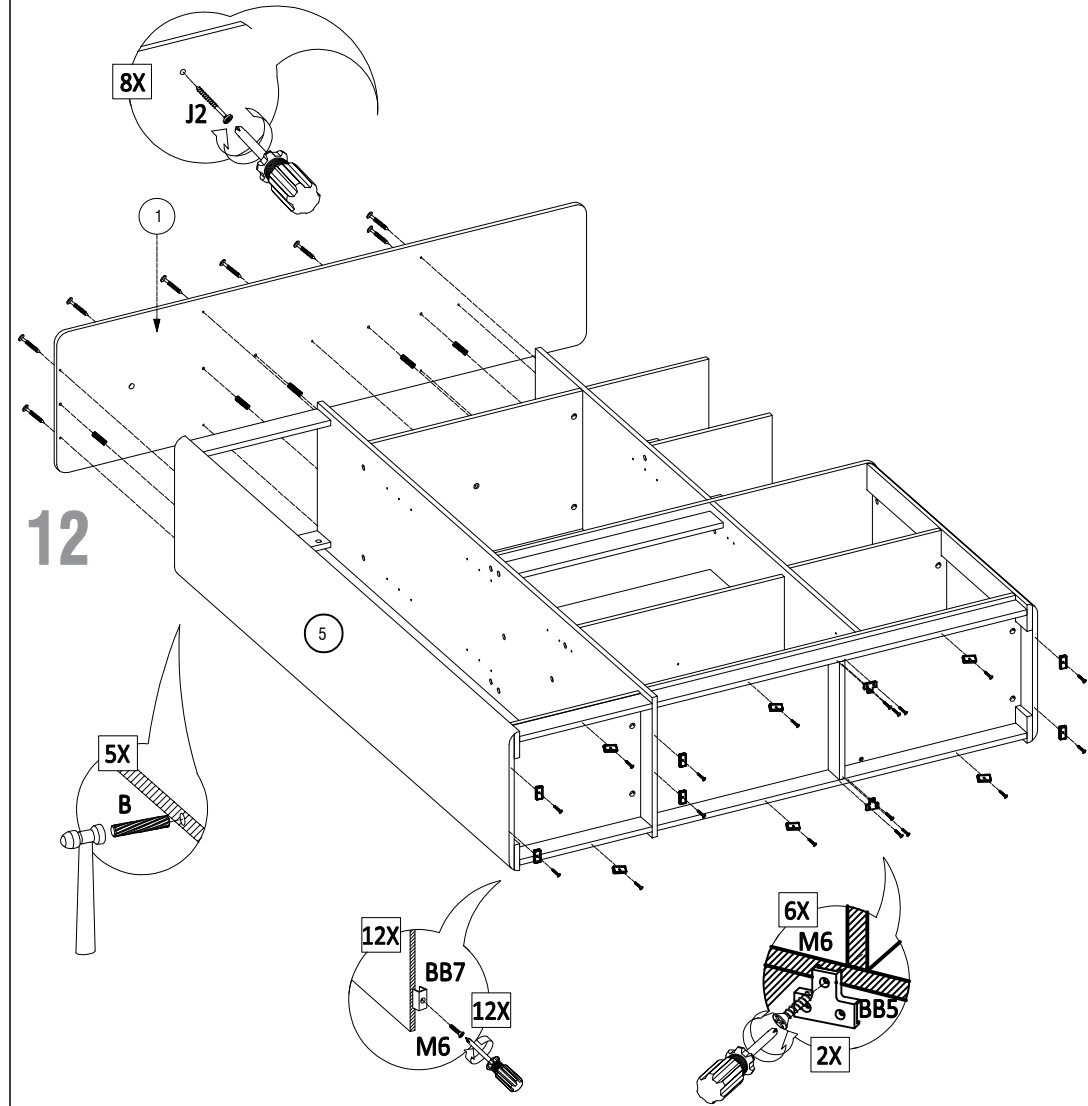


12

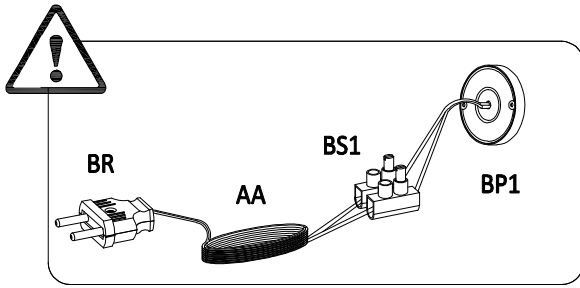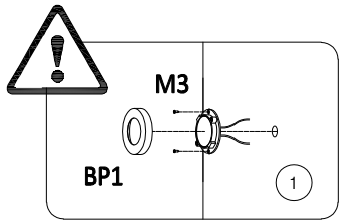


13

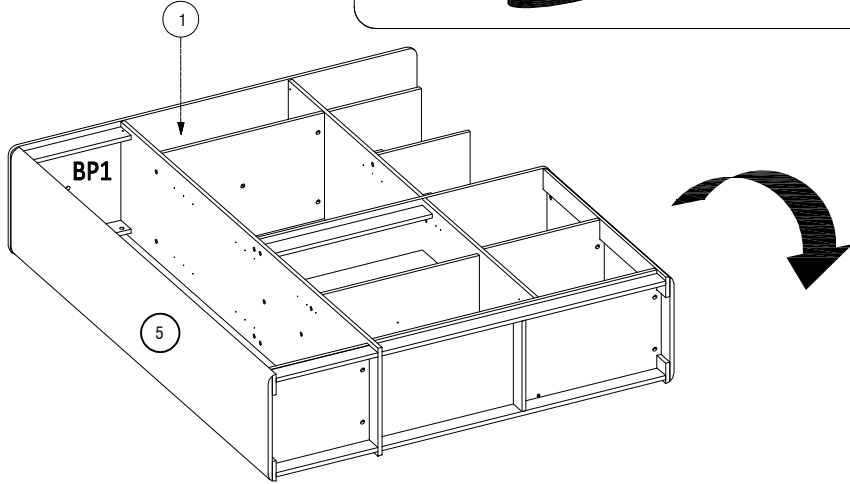


15

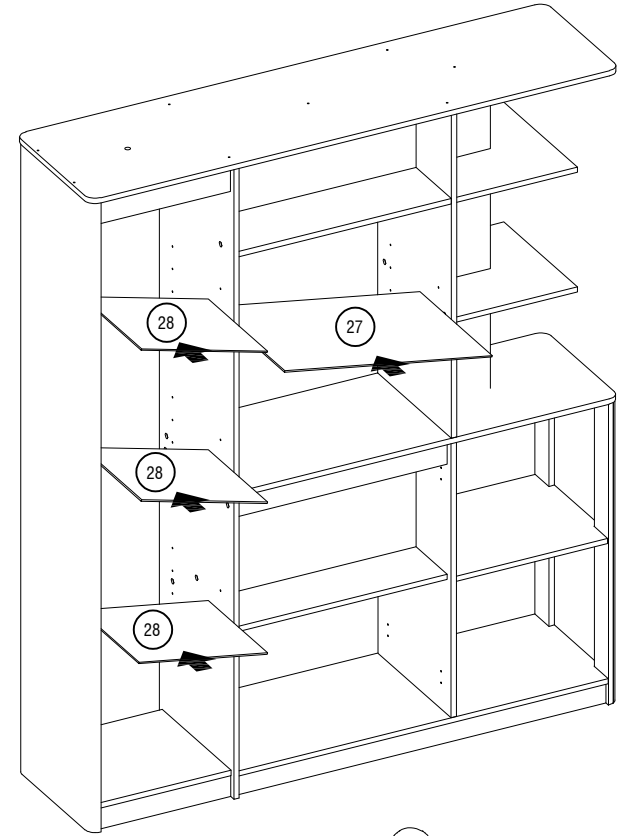

14

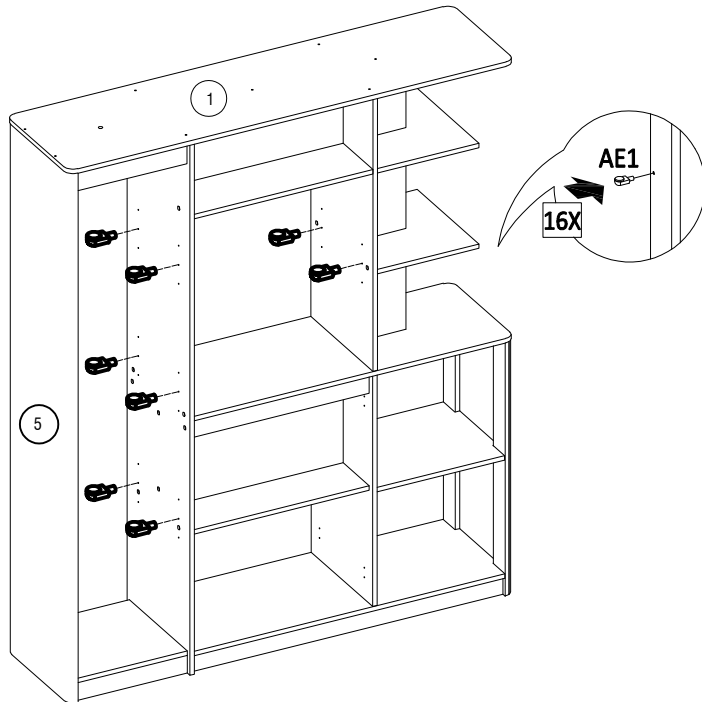


16

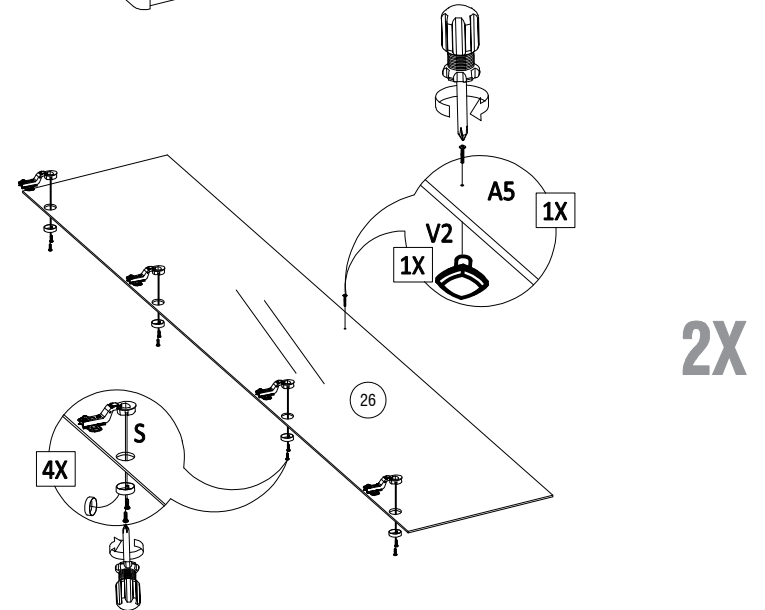


13

14

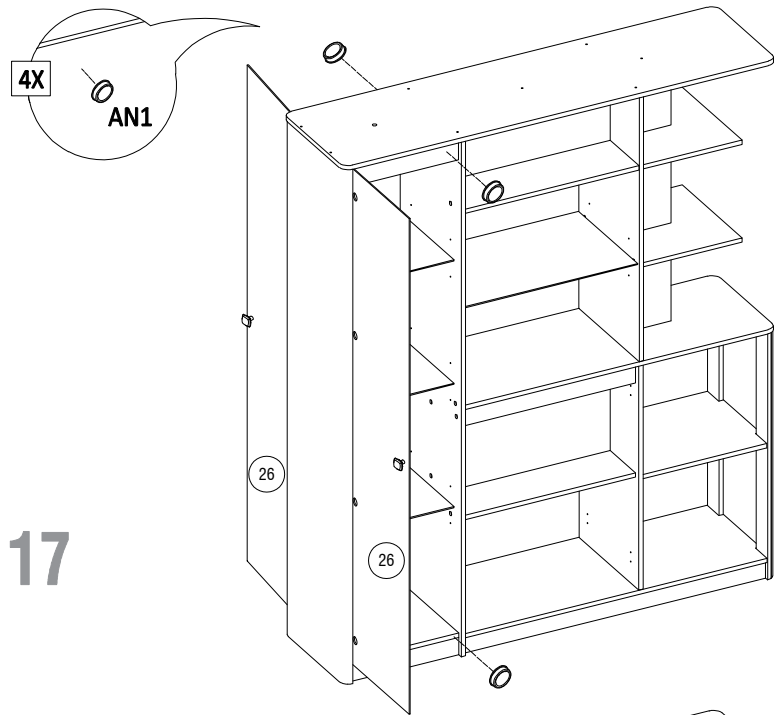


17

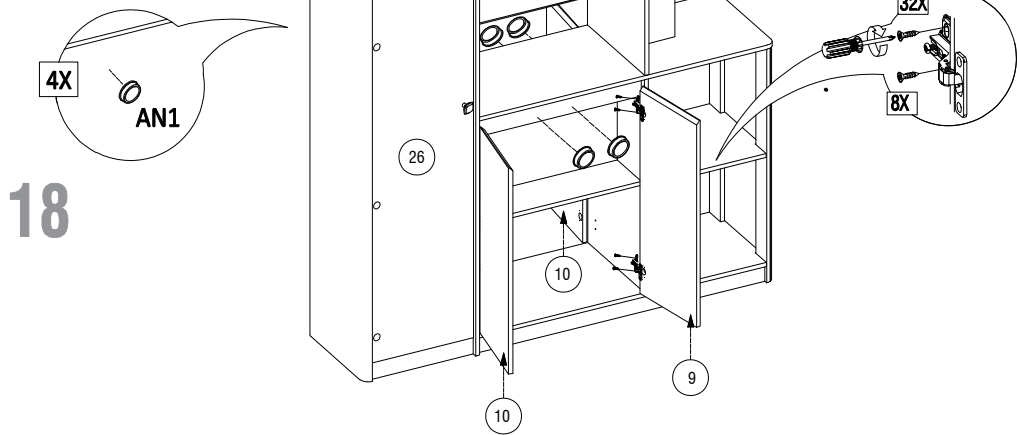


18

15

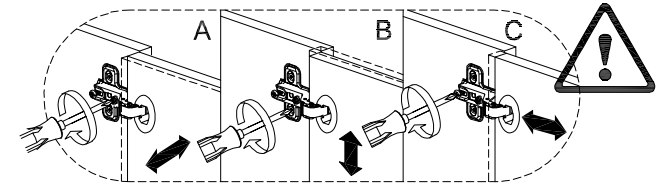

19

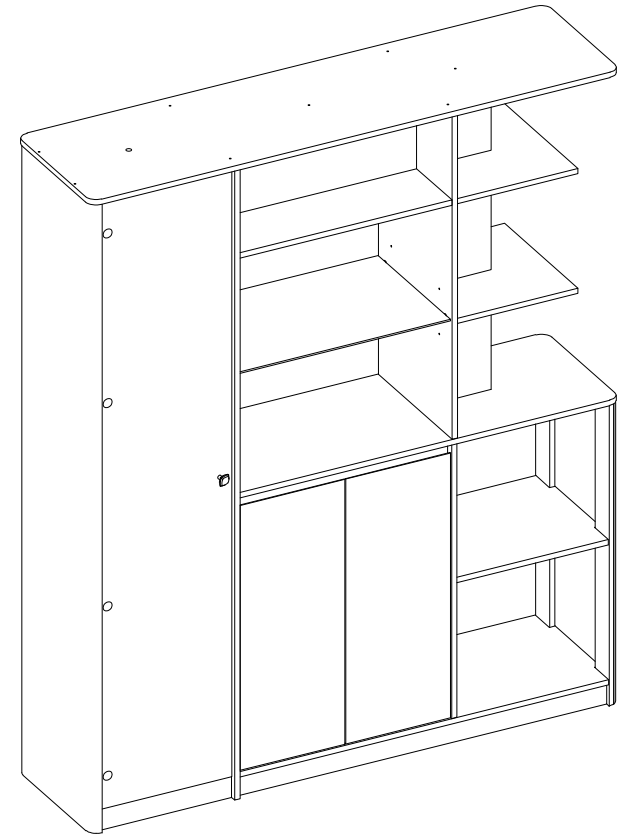

16