
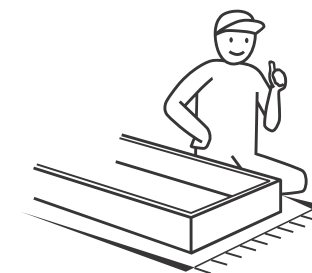
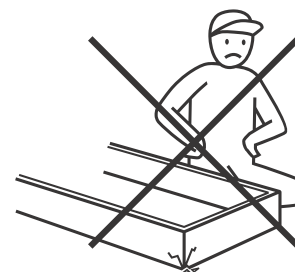
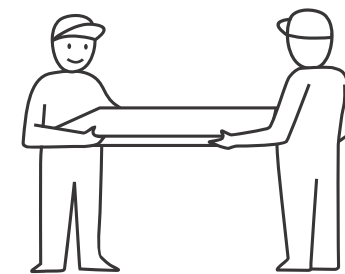






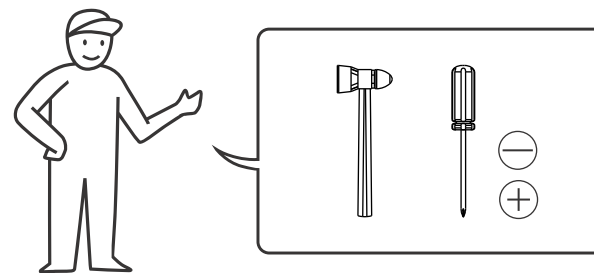





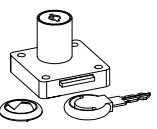
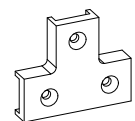


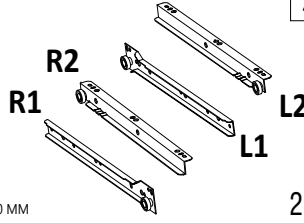



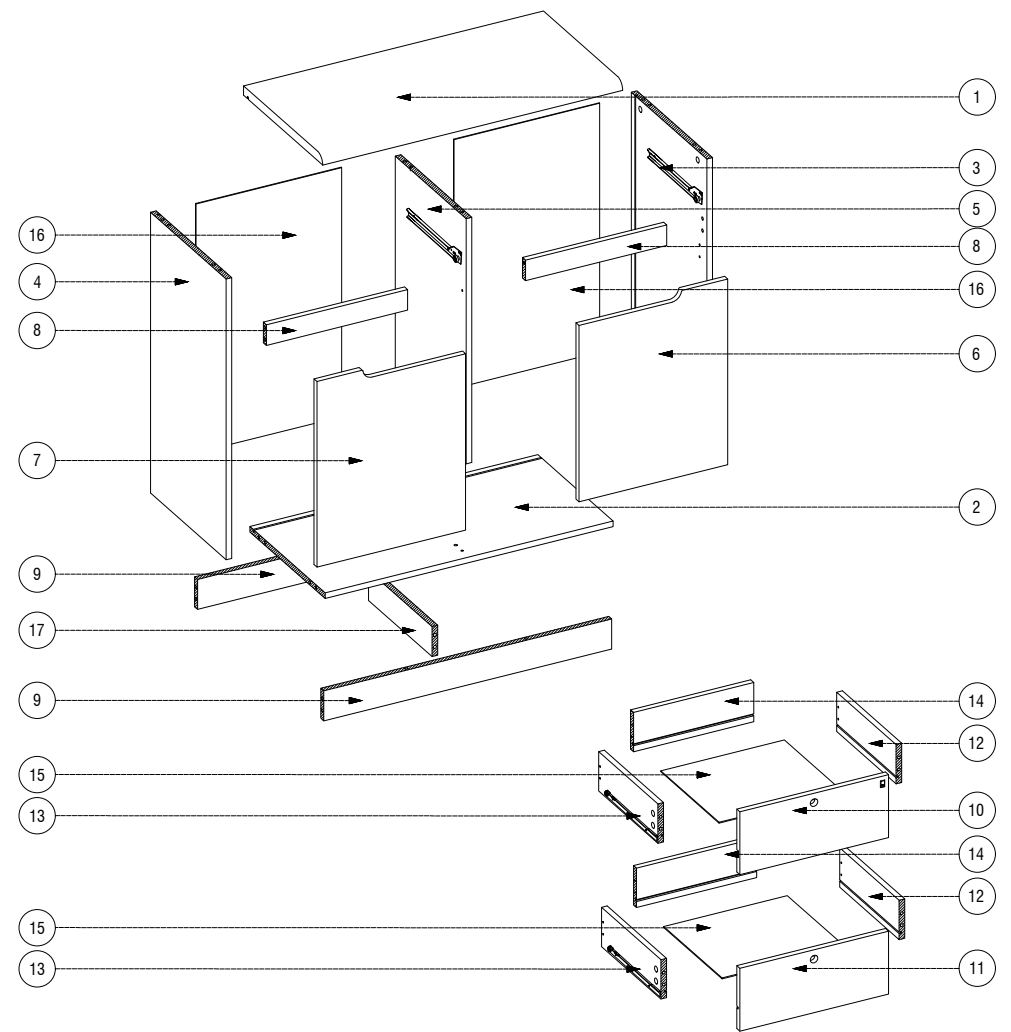
ASSEMBLING INSTRUCTION

DEXTER CABINET 80

BEIGE - AMERICAN WALNUT




 Ø 15 MM X 12 MM 20 X	 Ø 6 MM X 32 MM 20 X	 Ø 8 MM X 30 MM 32 X	 Ø 12 MM X 1 3/4 " 2 X	 Ø 6 MM X 1 1/2 " 8 X	 Ø 6 MM X 1/2 " 32 X
 Ø 6 MM X 5/8 " 18 X	 Ø 4 MM X 1/2 " 1 X	 Ø 4 MM X 5/8 " 8 X	 1 X	 INSET 8 X	 4 X
 Ø 19 MM 2 X	 15 MM 2 X	 15 MM 4 X	 BLACK 8 X	 R1 R2 L1 L2 300 MM 2 X	
 OGGI 1 X					




 X 1  ±55 M

1

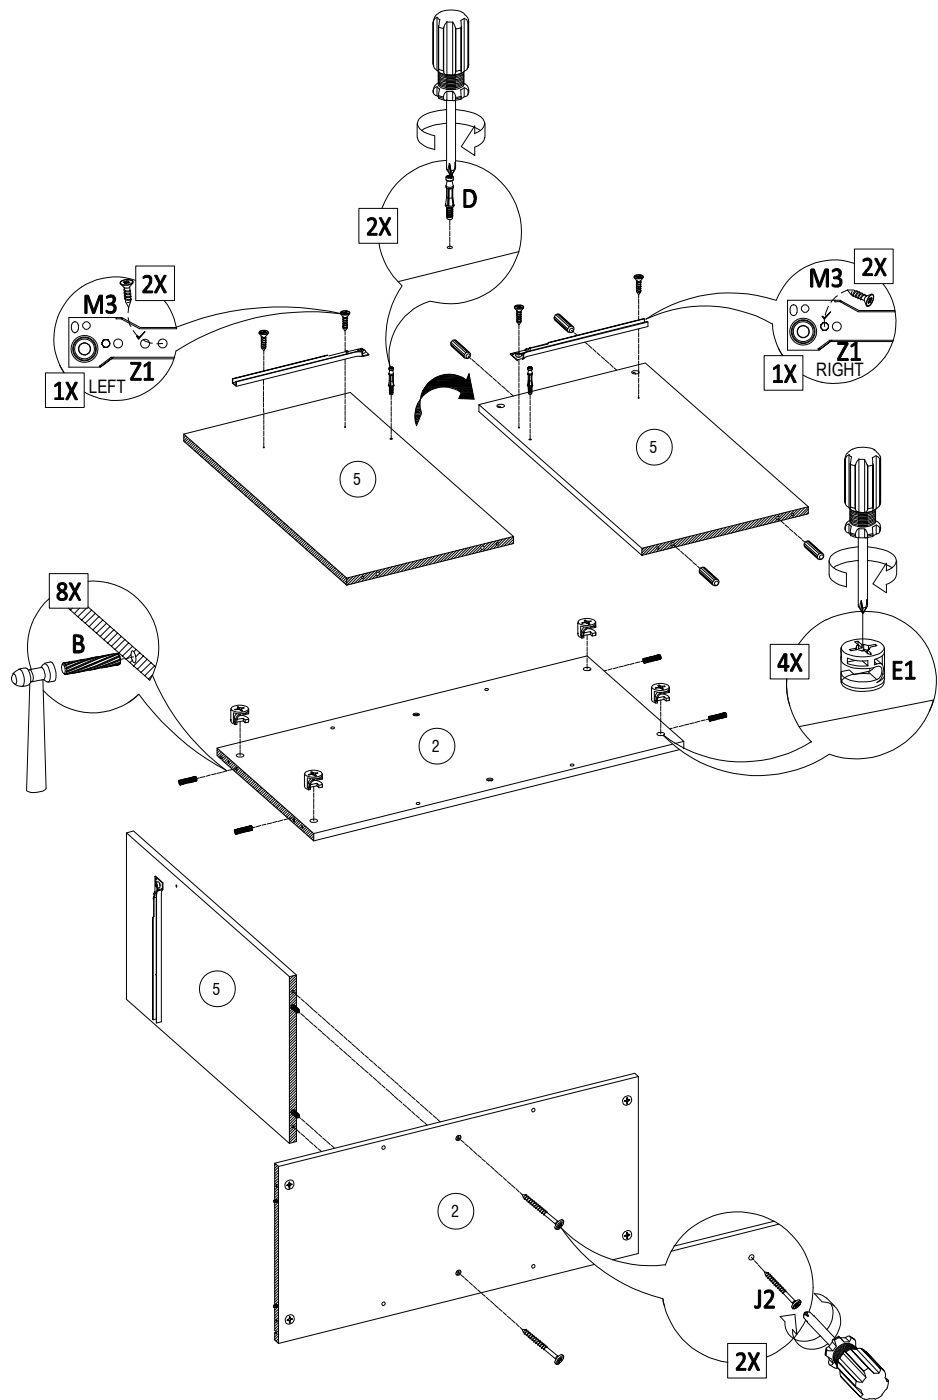


2


3

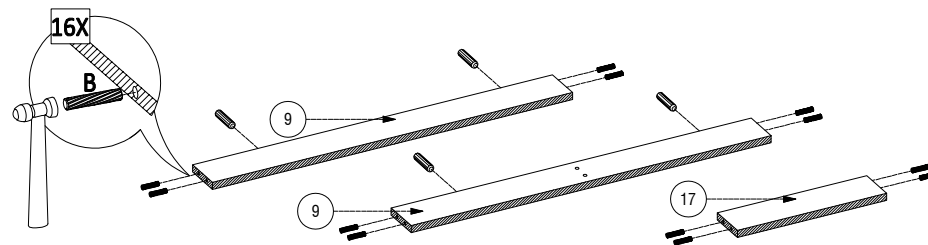


4

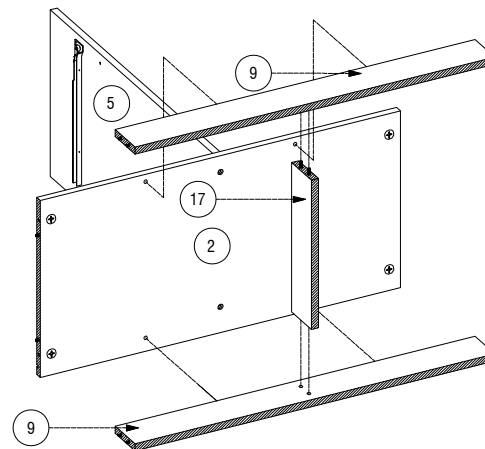


5

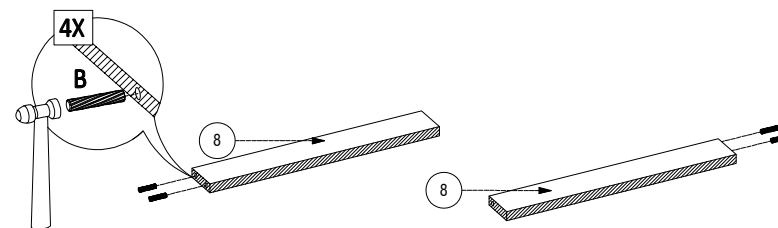


6

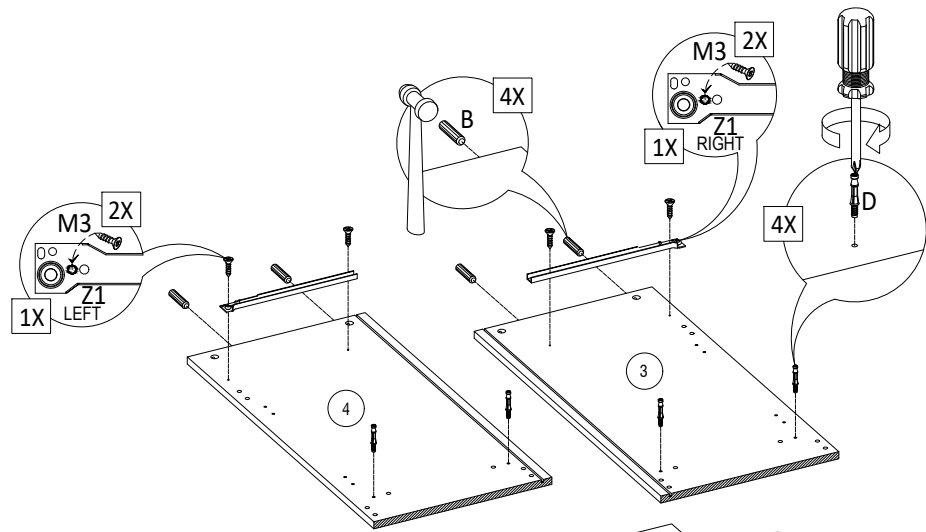

7

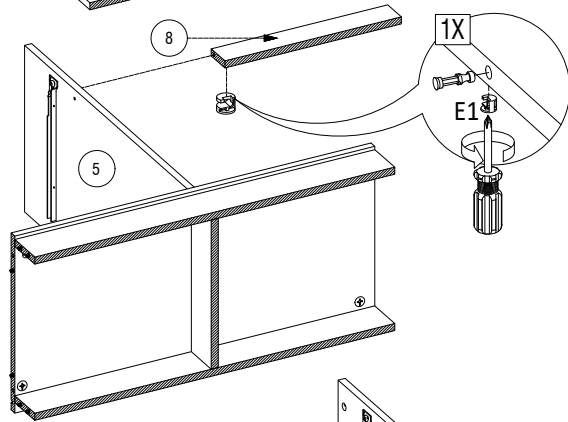


8

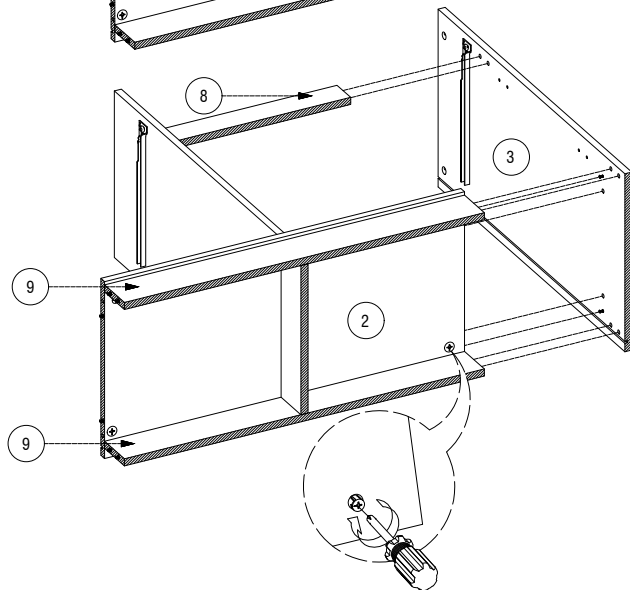


07

9

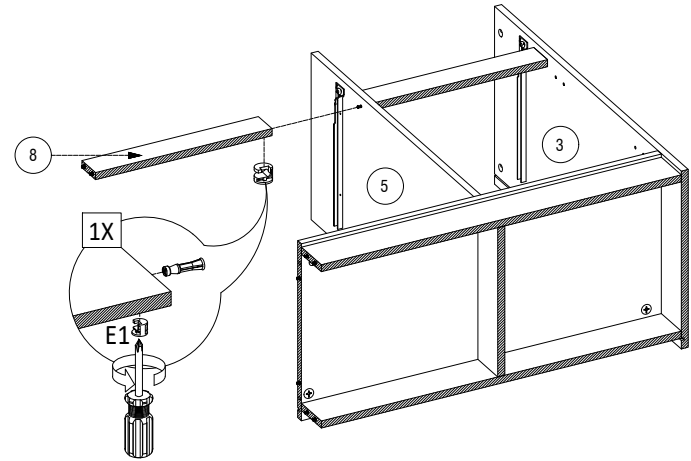


10

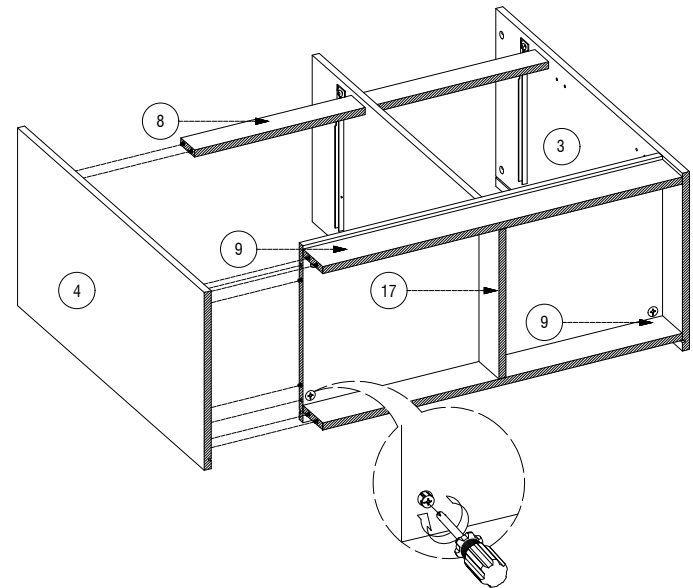


08


11

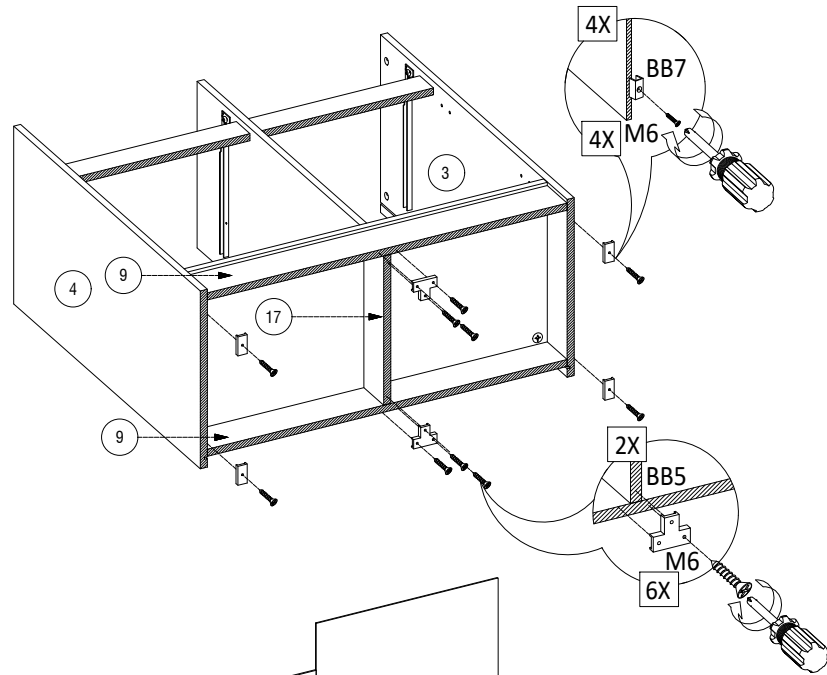


12

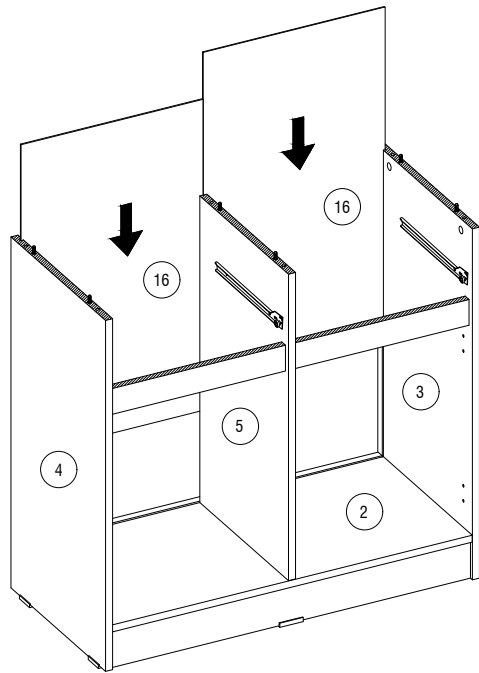


13

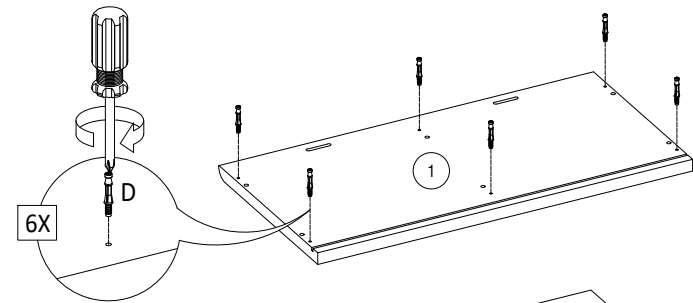


14

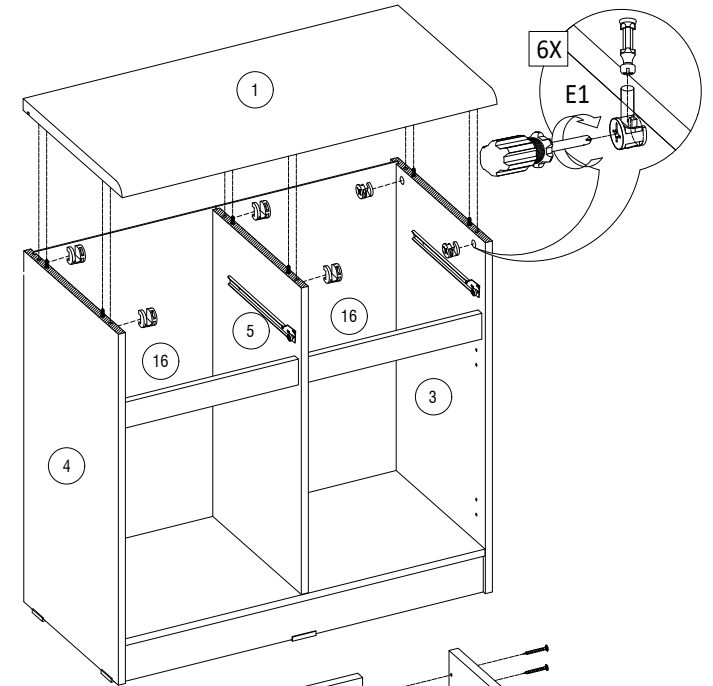

15

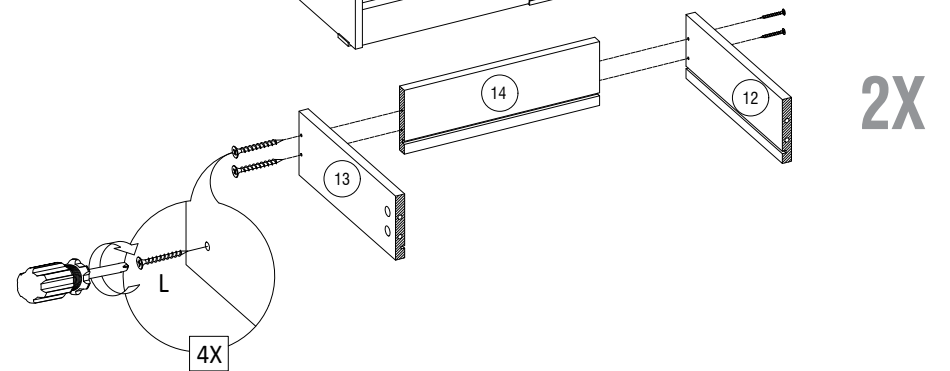


16

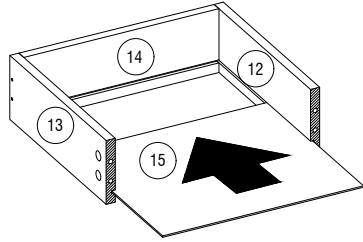


2X

17


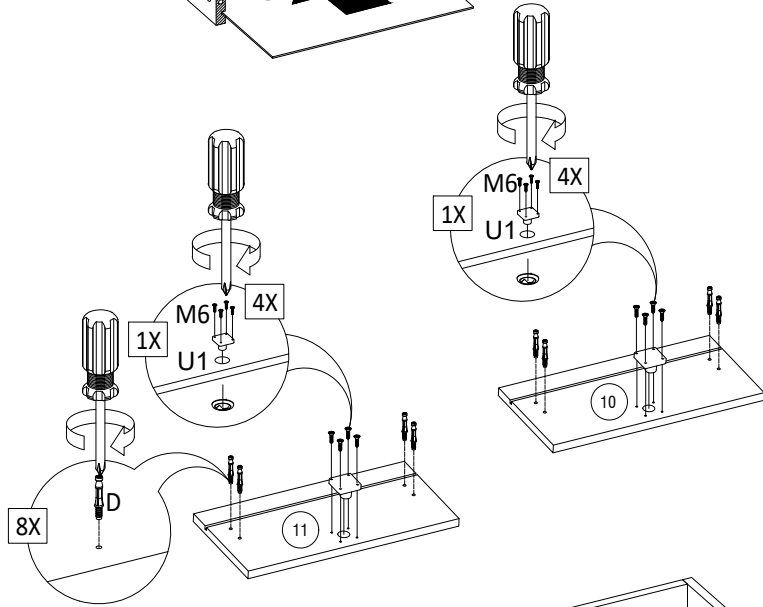


18

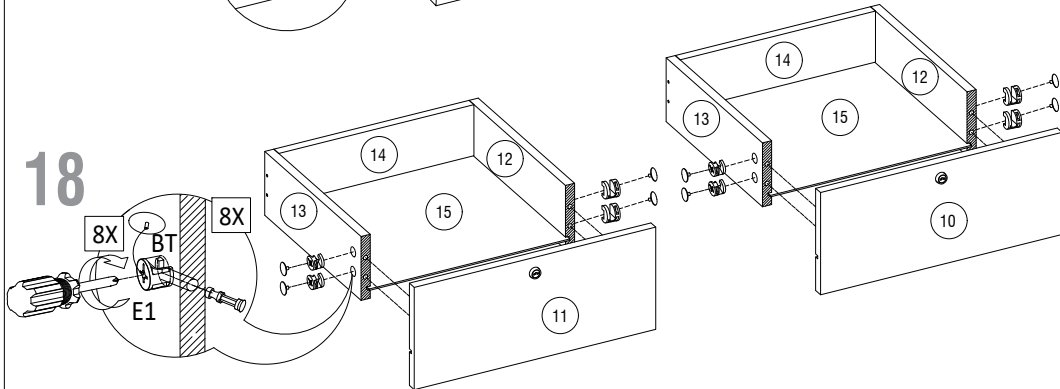


11

19

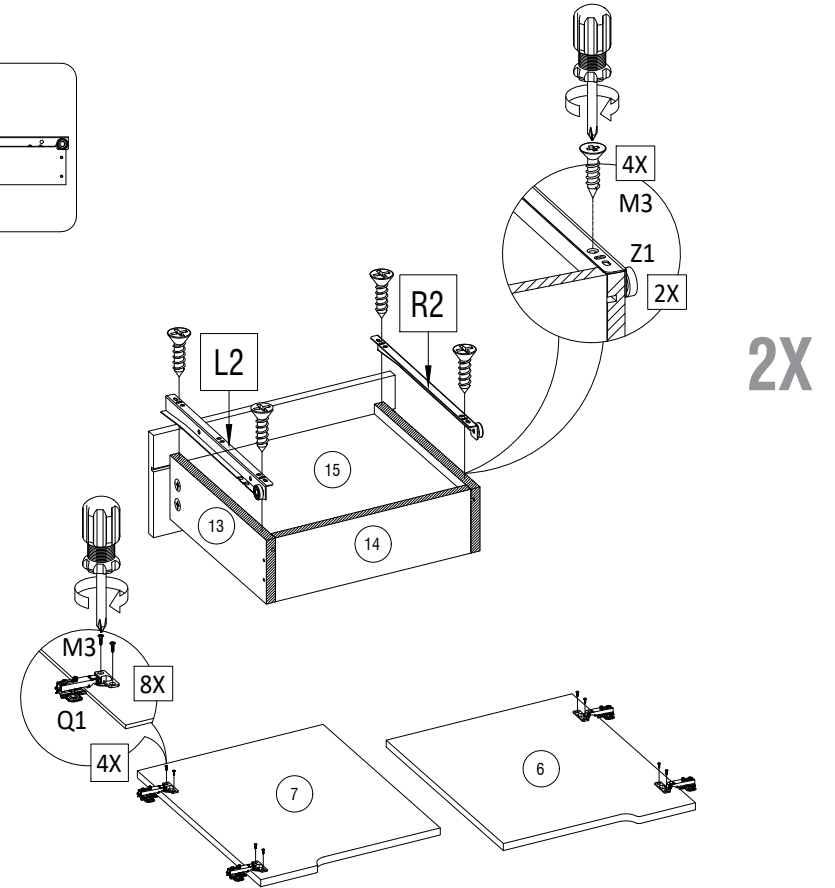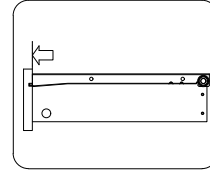


2X

20

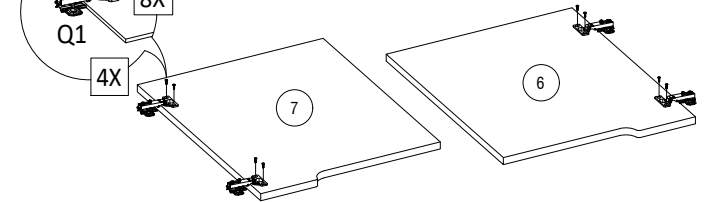


21

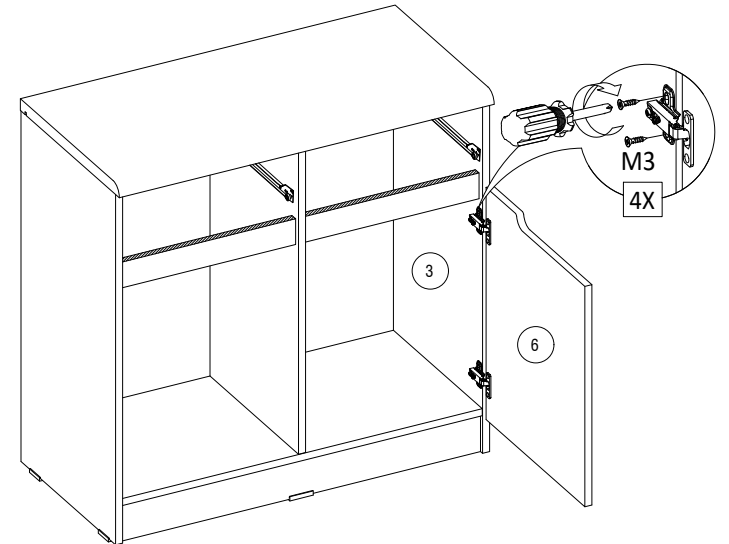


12

22

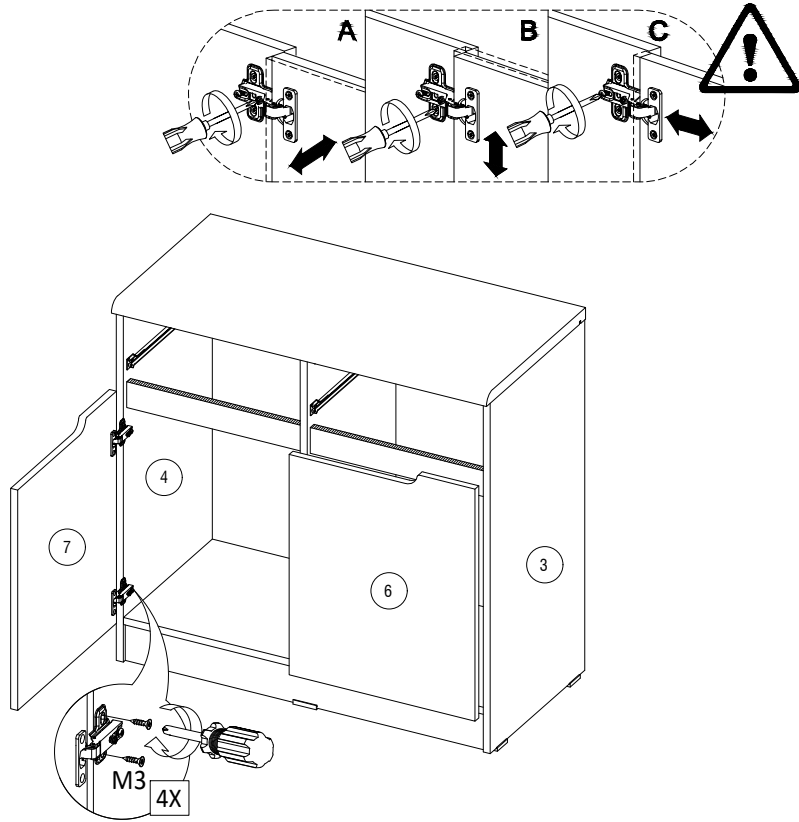


23

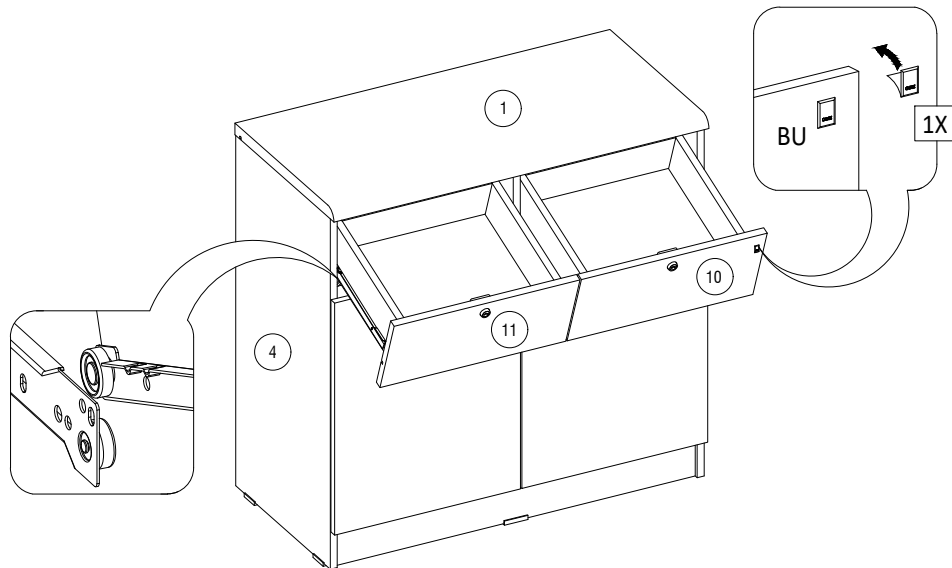


13

24

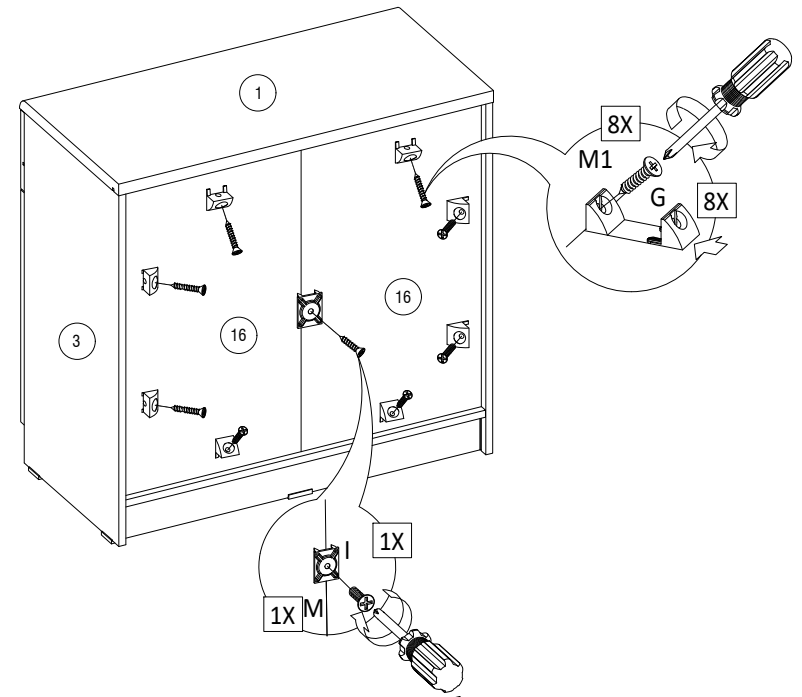

25

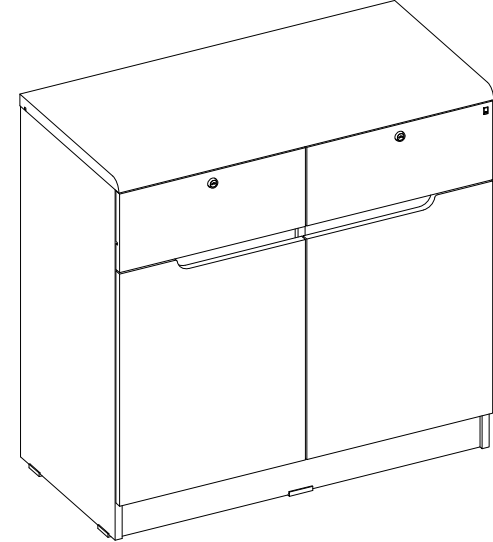

14