








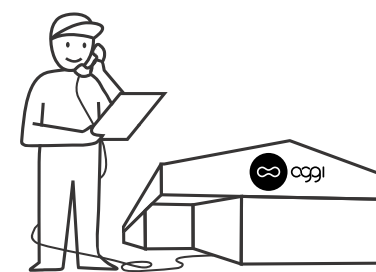






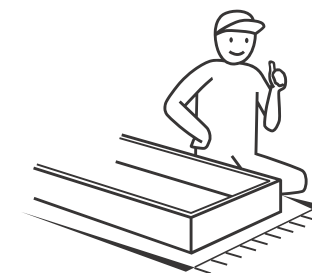


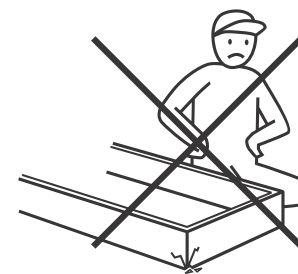


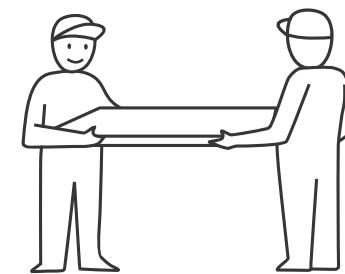

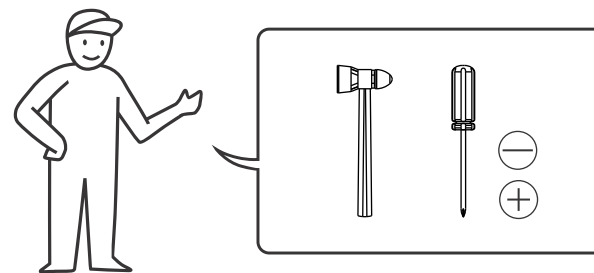





# ASSEMBLING INSTRUCTION

VERNA WARDROBE 2DM

WHITE



|  |  |   |   |   |  |
|--|--|---|---|---|--|
| 011402<br><br>26 X<br>Ø6 MM X 1 1/2" | 011601<br><br>4 X    | 010501<br><br>30 X | 050402<br><br>8 X              | 050301<br><br>2 X  | 011707<br><br>16 X<br>Ø6 X 5/8" |
| 100905<br><br>2 X                    | 100901<br><br>2 X   | 020304<br><br>2 X  | 020305<br><br>5 X              | 030201<br><br>3 X  | 060135<br><br>2 X                |
| 011002<br><br>12 gr                 | 011001<br><br>12 gr | 090801<br><br>1 X  | 050503<br><br>4 X<br>Ø6 X 1/2" | 011704<br><br>51 X | 010801<br><br>1 X                |
| 010701<br><br>1 X                   | 090701<br><br>1 X   | 090101<br><br>1 X  |   |   |  |

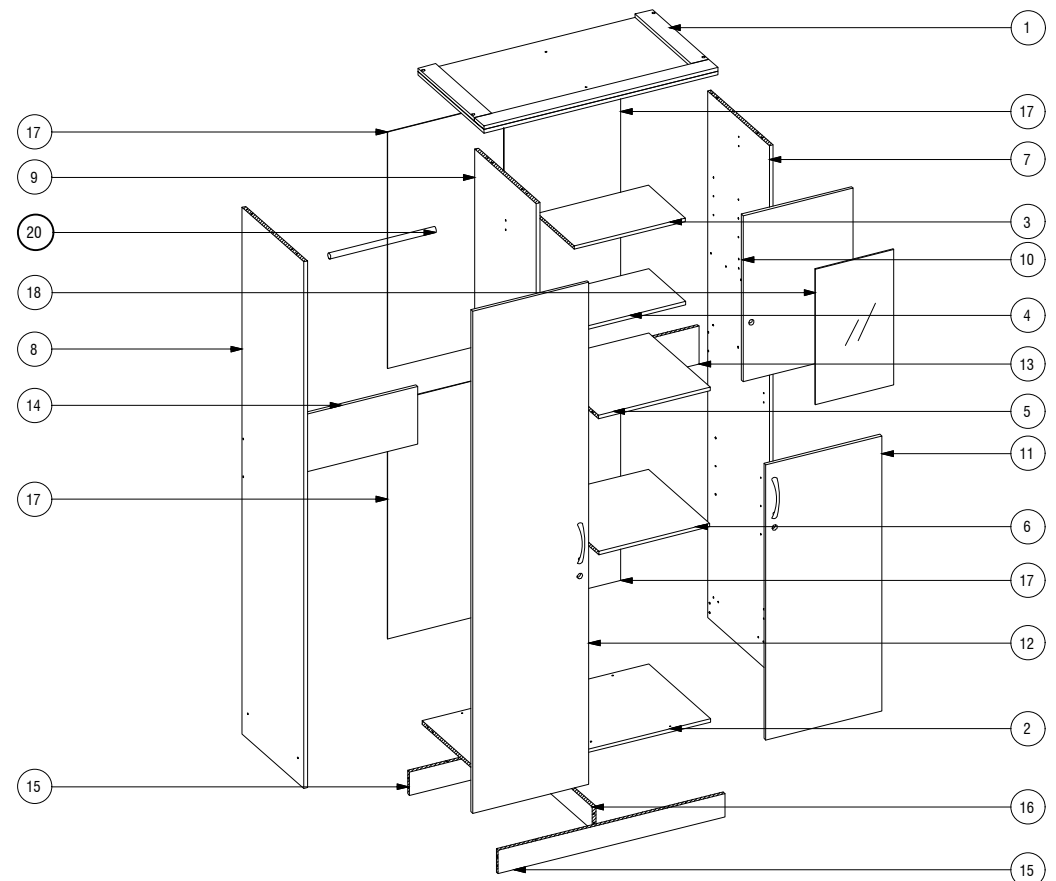



050503




4 X Ø6 X 1/2"

011704




48 X

020304




2 X

020305




5 X

030201



3 X

060135




2 X

090101




1 X


5

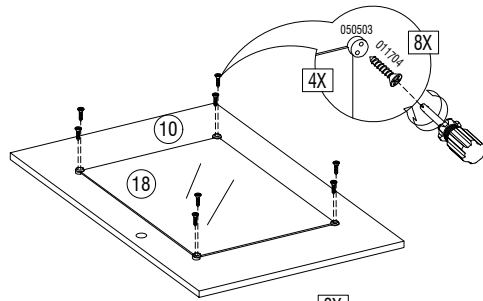

6

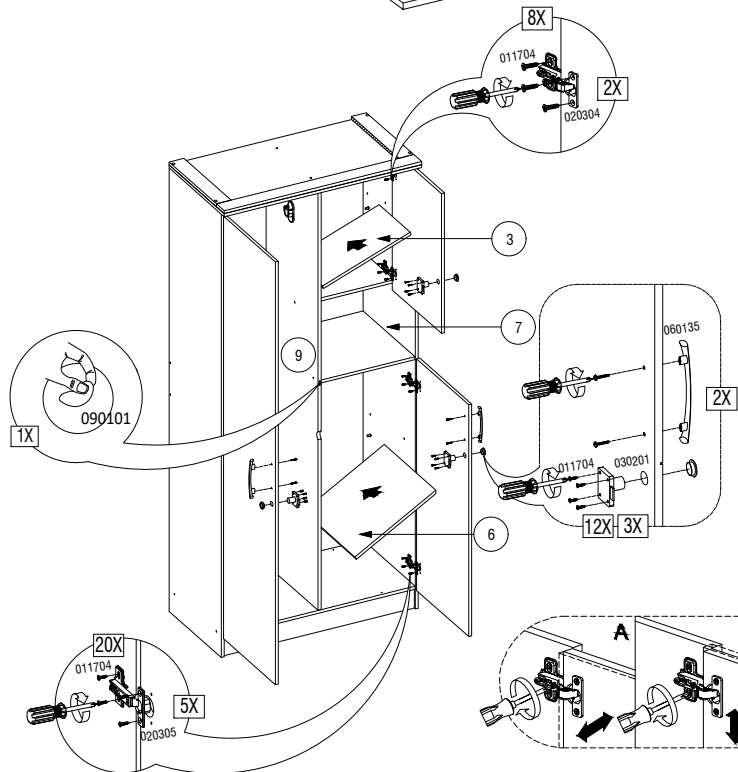

7

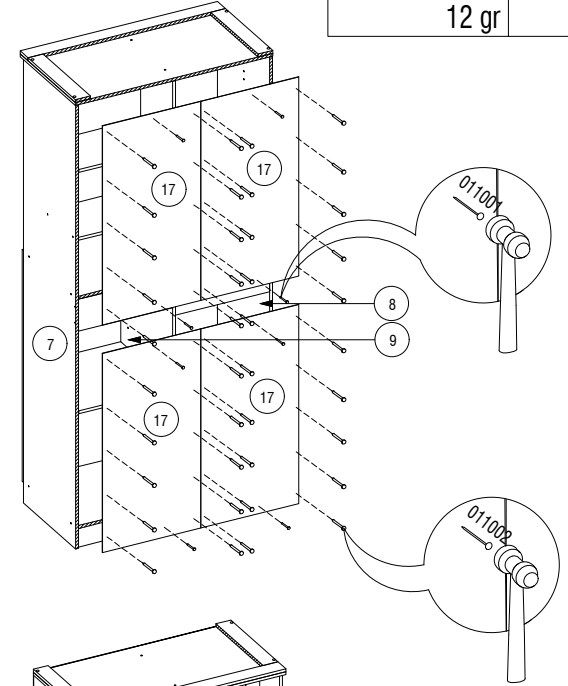

8

