


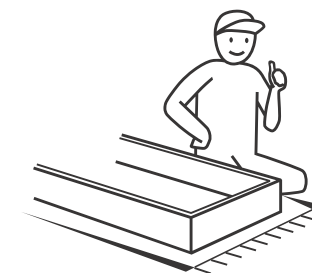


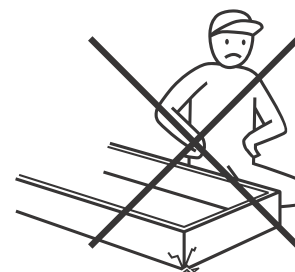





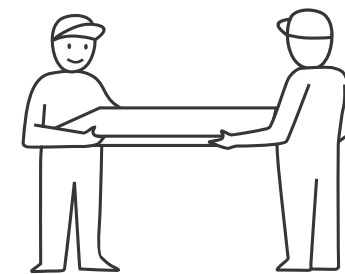













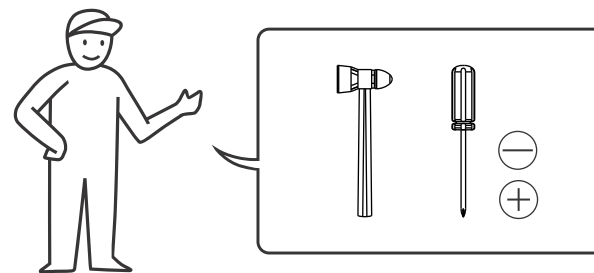

BY GGGI FURNITURE


ASSEMBLING INSTRUCTION



NOVA WARDROBE 3DM




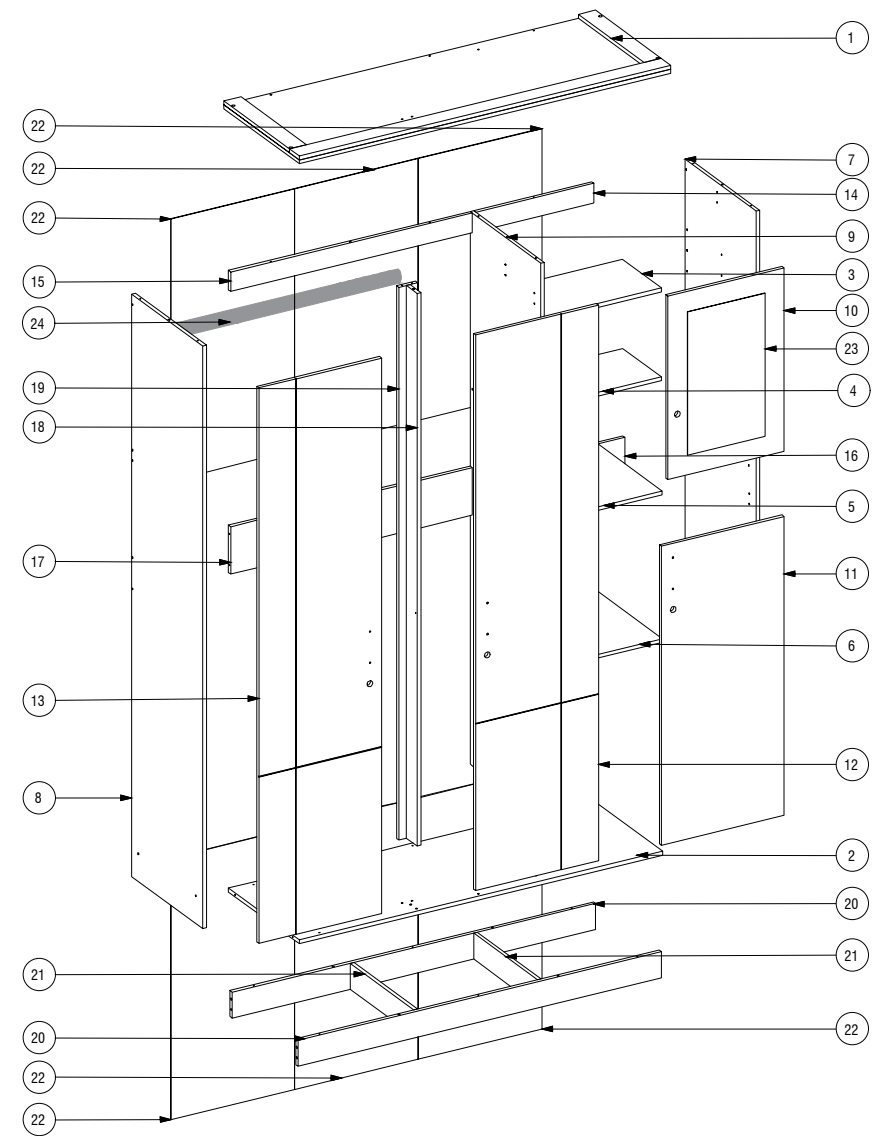


FRENCH WALNUT - WHITE







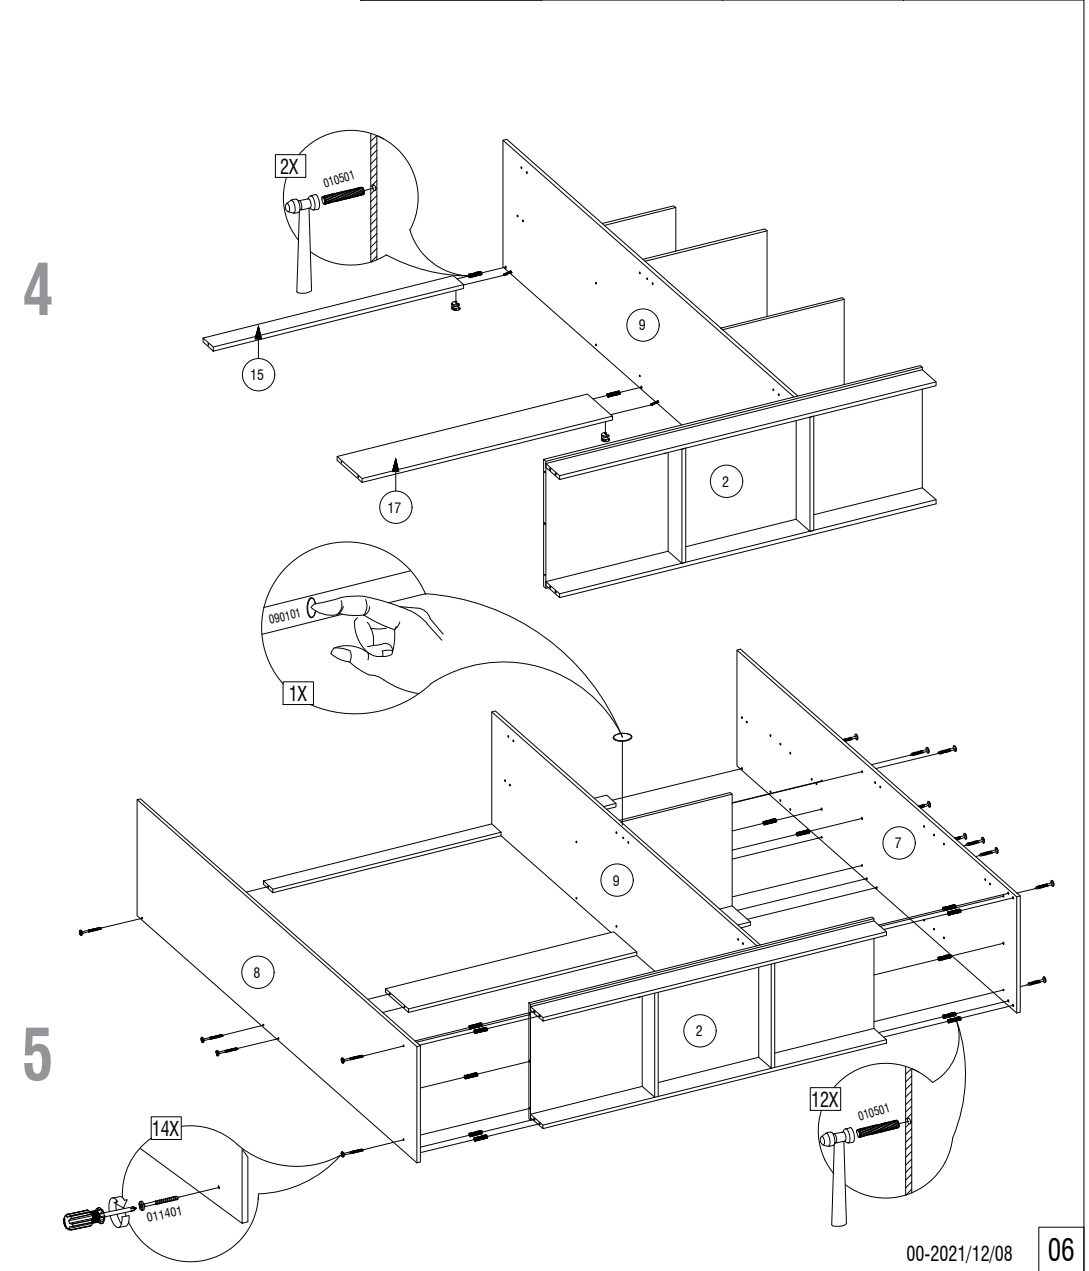
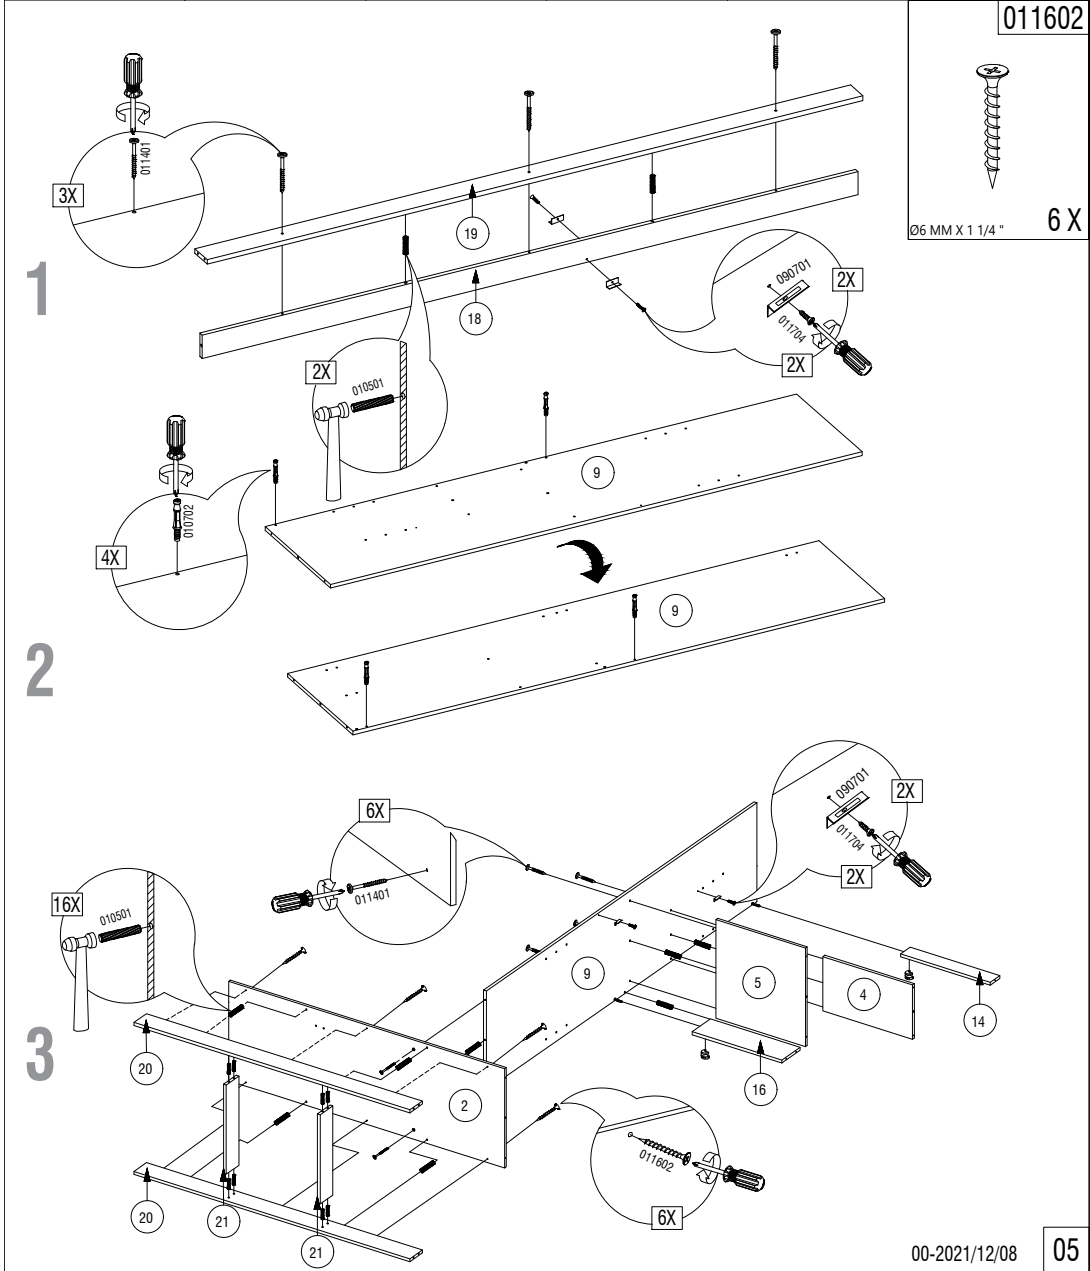
010702  4 X	010802  4 X	010501  39 X	020303  3 X	011704  70 X Ø6 X 1/2"	011002  12 gr
050301  2 X	011707  20 X Ø6 X 5/8"	011001  5 gr	100901  2 X	100905  4 X	060129  3 X
020302  5 X	030201  4 X	011401  33 X	011602  9 X Ø6 MM X 1 1/4"	020301  2 X	050302  1 X
050503  4 X	090701  4 X	050402  8 X	090101  1 X		















 x2 ±110 M 

<p>011401</p>  <p>9 X</p>	<p>010501</p>  <p>18 X</p>	<p>011704</p>  <p>4 X</p>	<p>090701</p>  <p>4 X</p>	<p>010802</p>  <p>2 X</p>	<p>010702</p>  <p>4 X</p>
---	---	--	--	--	---


<p>090101</p>  <p>1 X</p>	<p>010802</p>  <p>2 X</p>	<p>011401</p>  <p>14 X</p>	<p>010501</p>  <p>14 X</p>
--	--	--	---




 Ø6 X 5/8" 20 X	 4 X	 2 X	 7 X	 Ø6 MM X 1 1/4" 3 X	 10 X
---	--	--	--	---	--

 5 X	 3 X	 2 X	 4 X	 3 X	 8 X
--	--	--	--	--	--


 4 X	 Ø6 X 1/2" 8 X
--	--

 Ø6 X 1/2" 68 X


6

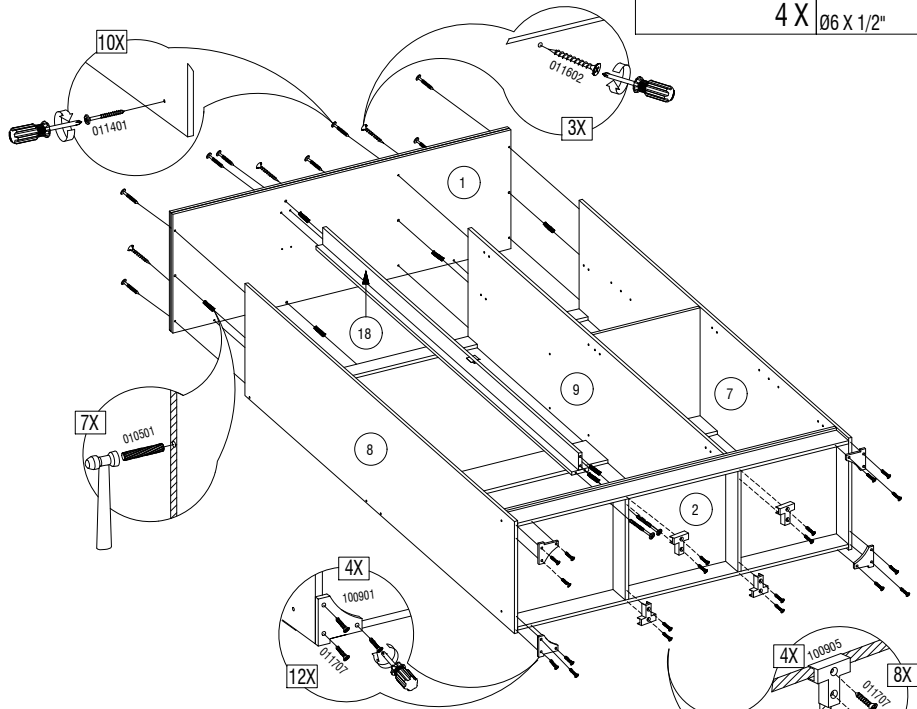

7

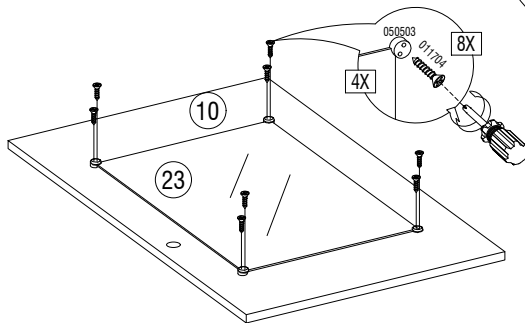

8

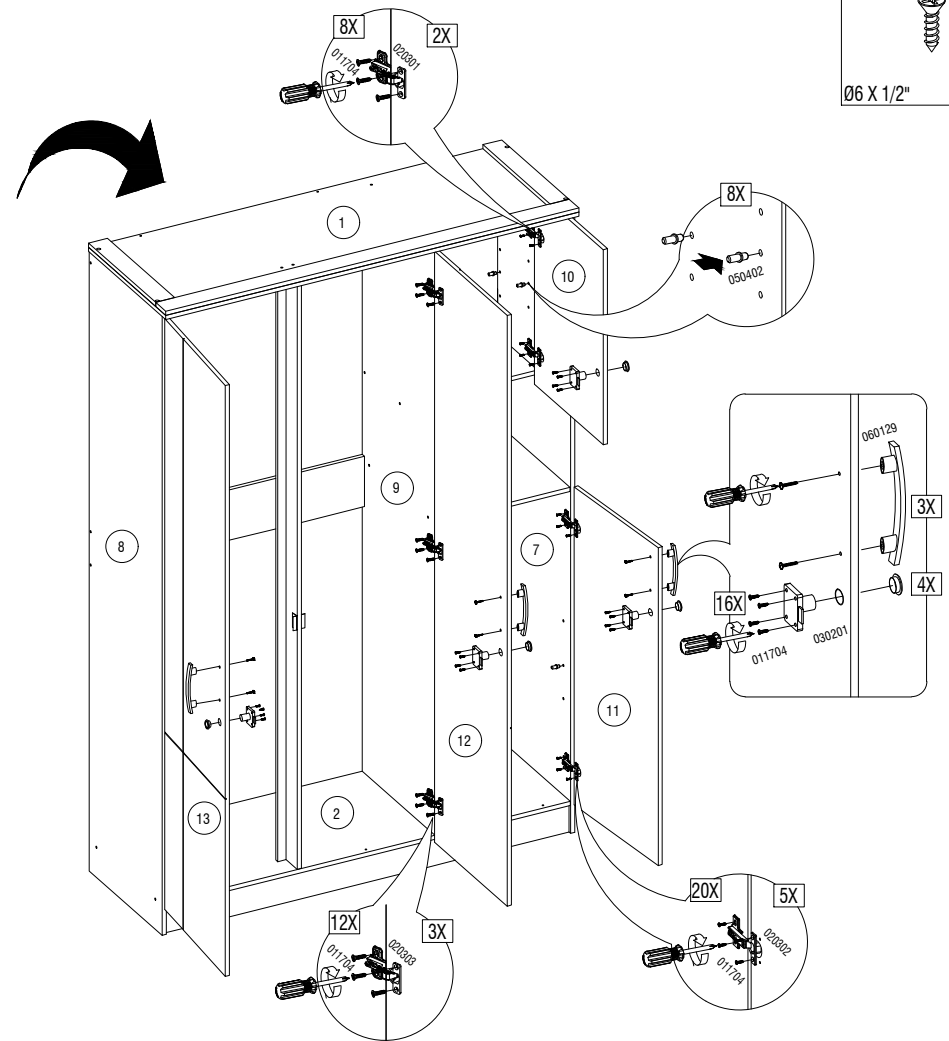

011704

050301

050302




Ø6 X 1/2"

2 X



2 X



1 X

011001


011002



5 gr




12 gr

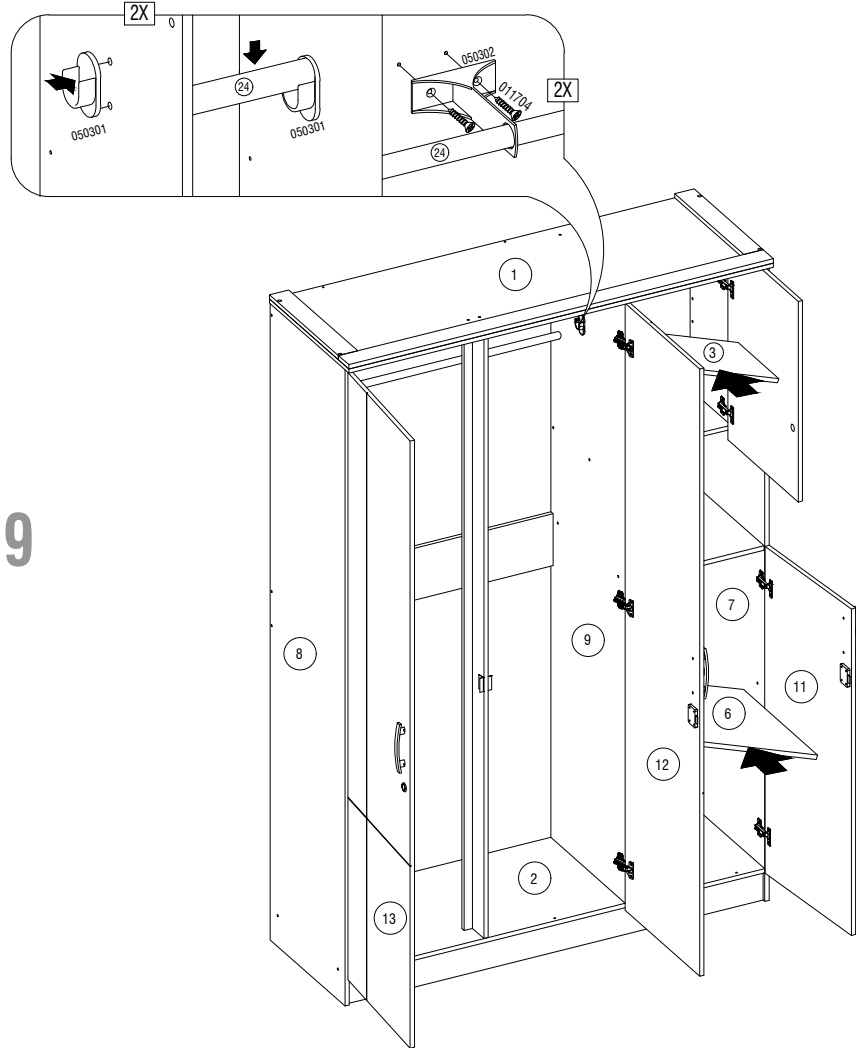

9

10

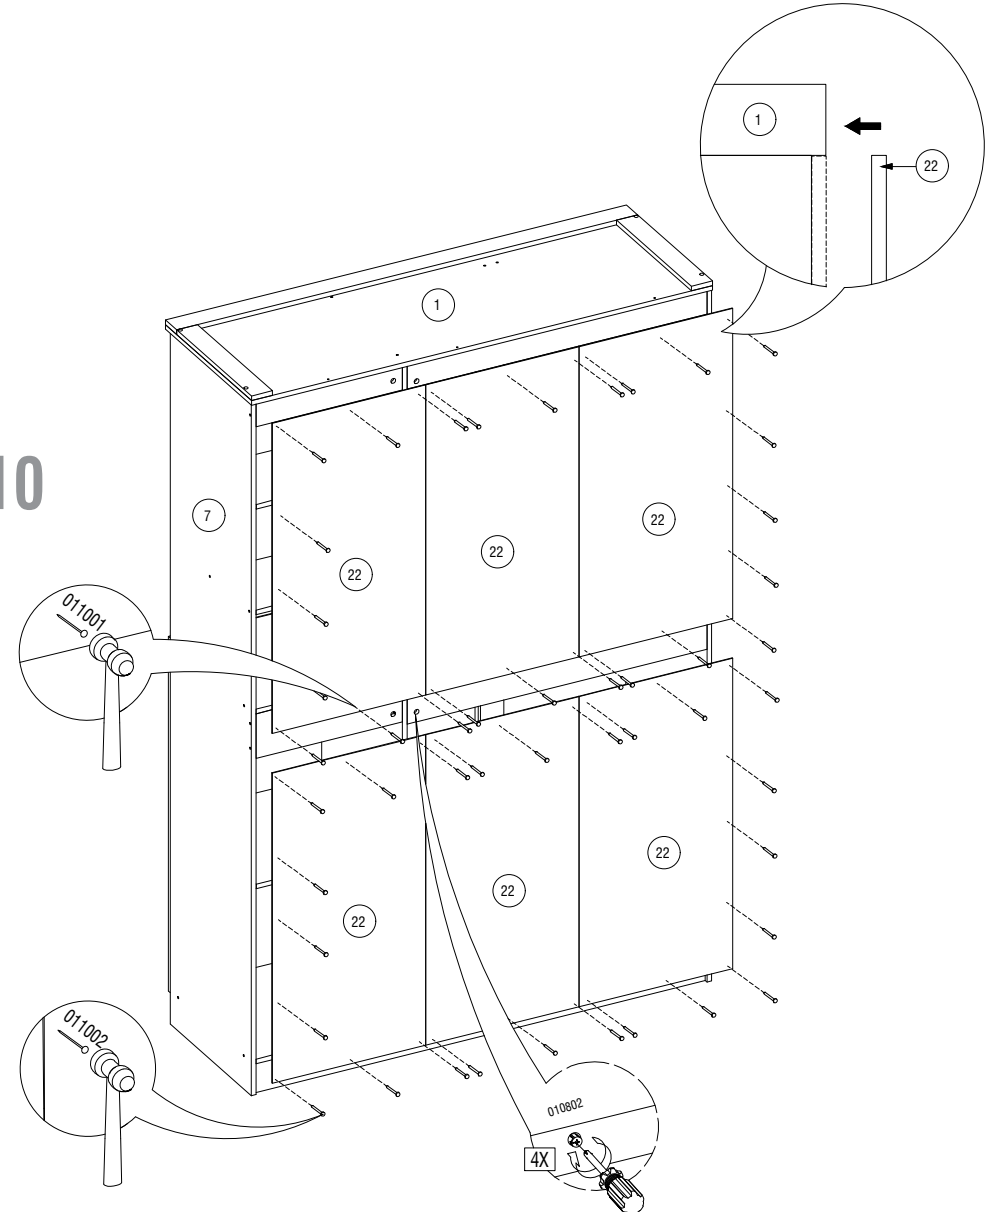

11

