


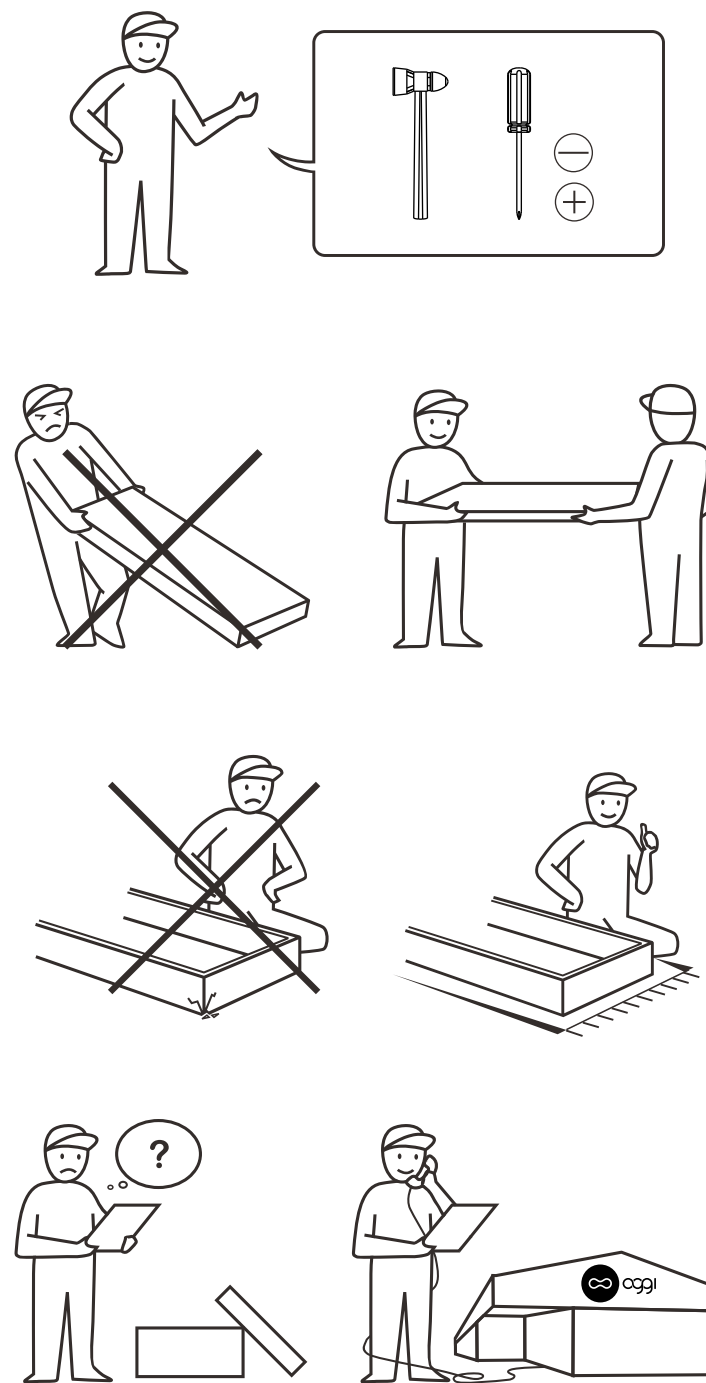















BY OGGI FURNITURE


ASSEMBLING INSTRUCTION

VERNA BABY LOCKER 80

WHITE



010701  6 X	010801  6 X	010501  20 X	090801  1 X	011704  34 X Ø6 X 1/2"	011002  12 gr
050301  2 X	011707  16 X Ø6 X 5/8"	050402  4 X	100901  2 X	100905  2 X	060135  2 X
020305  6 X	030201  2 X	011402  10 X Ø10 MM X 1 3/4"	011601  4 X Ø6 MM X 1 1/2"		

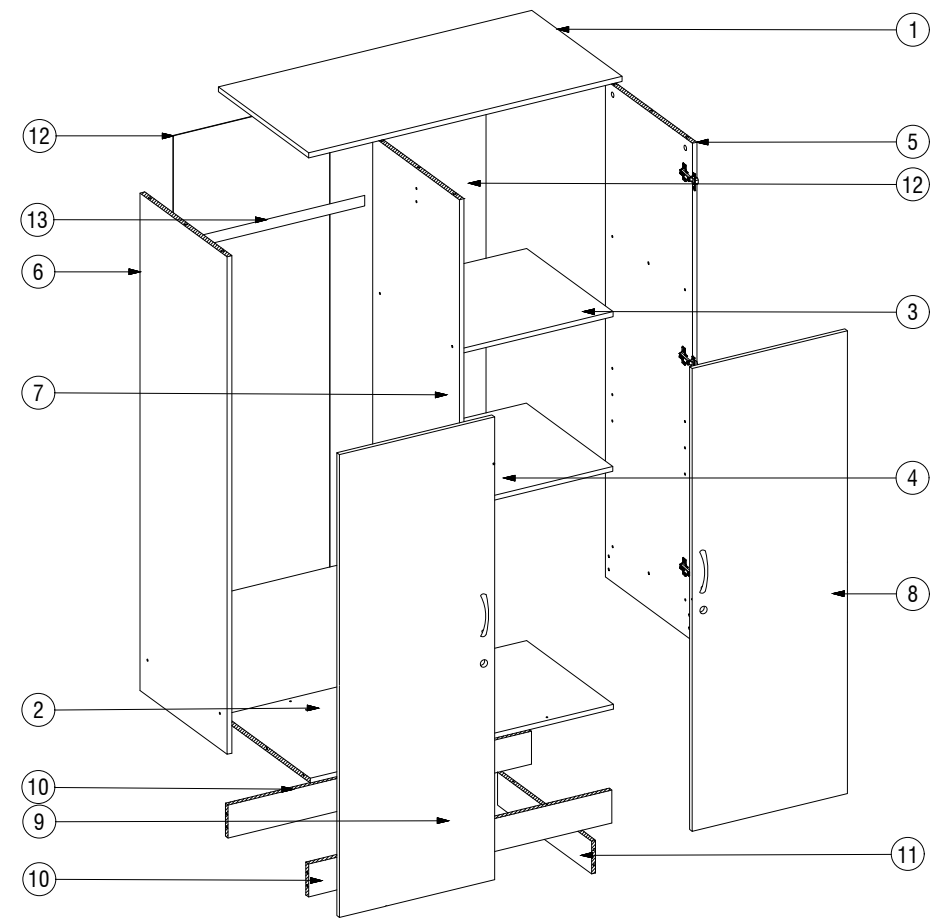

±45 M ↻




010501



6 X

090801



1 X


011704



2 X

Ø6 X 1/2"


011402



4 X

Ø10 MM X 1 3/4"

011601



4 X

Ø6 MM X 1 1/2"

010701



6 X

Ø10 MM X 1 3/4"

011401



6 X

010501



14 X


Ø6 X 5/8"

011707




16 X

100905



2 X

100901




2 X


010801




6 X

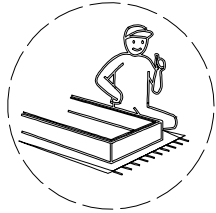


1

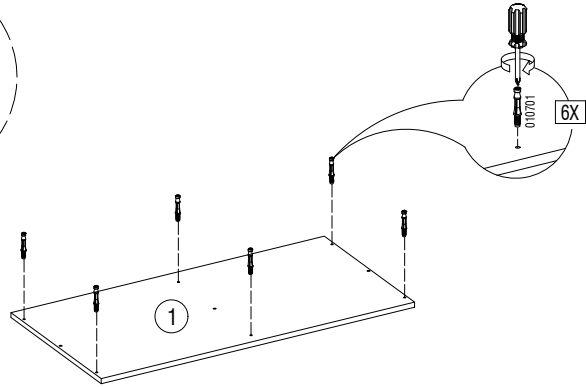


2

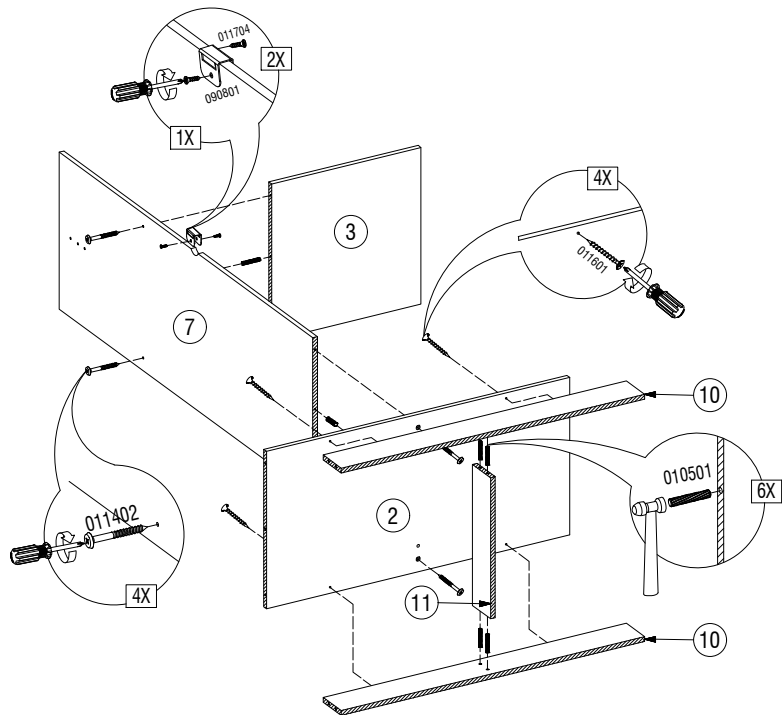


3

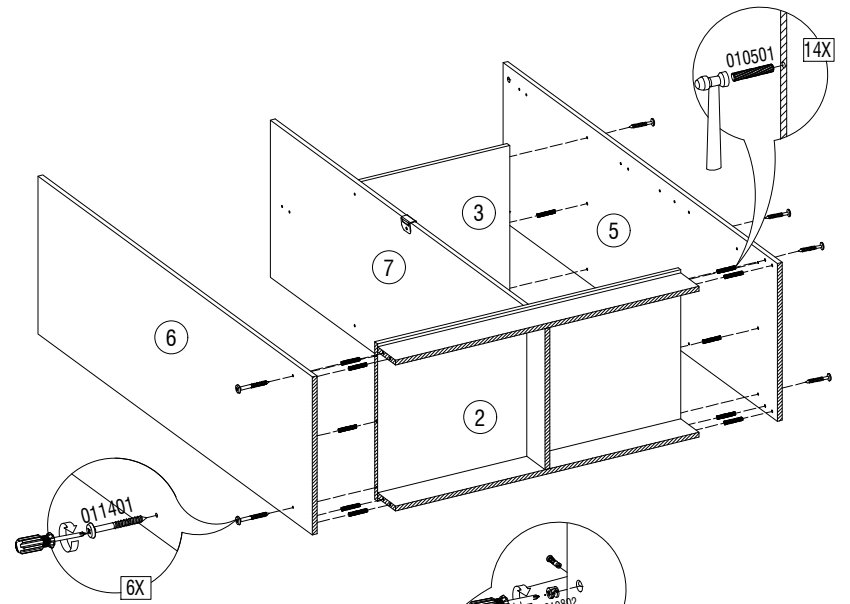

4

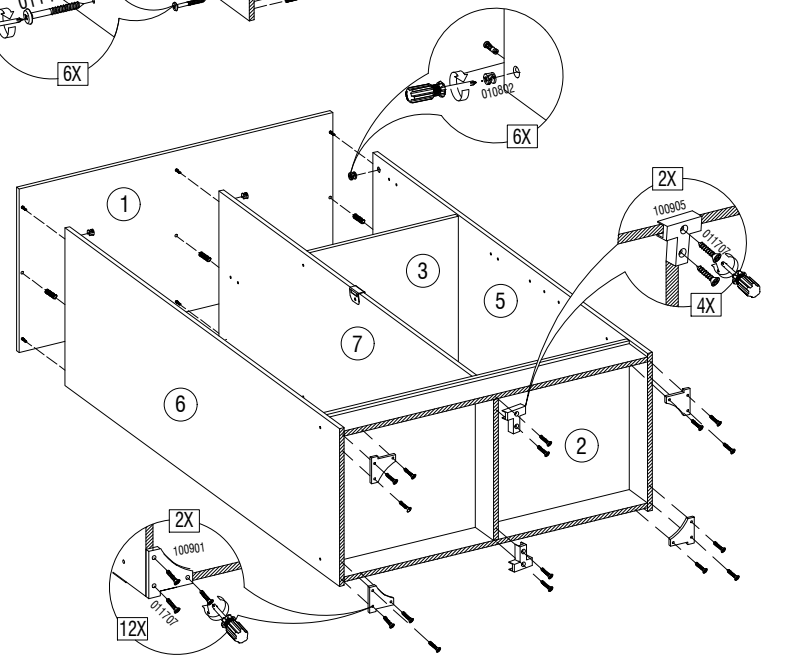


020305



6 X

030201



2 X

011704



Ø6 X 1/2"

32 X

060135




2 X

050402



4 X

050301




2 X

011002




12 gr


5

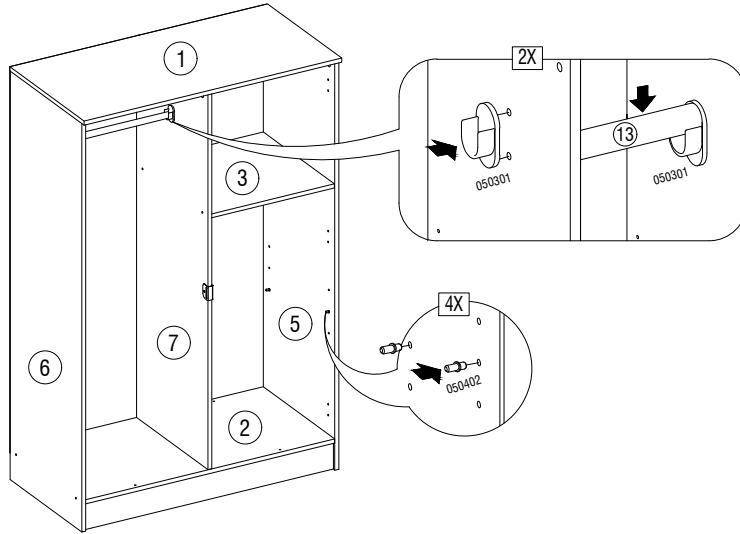

7

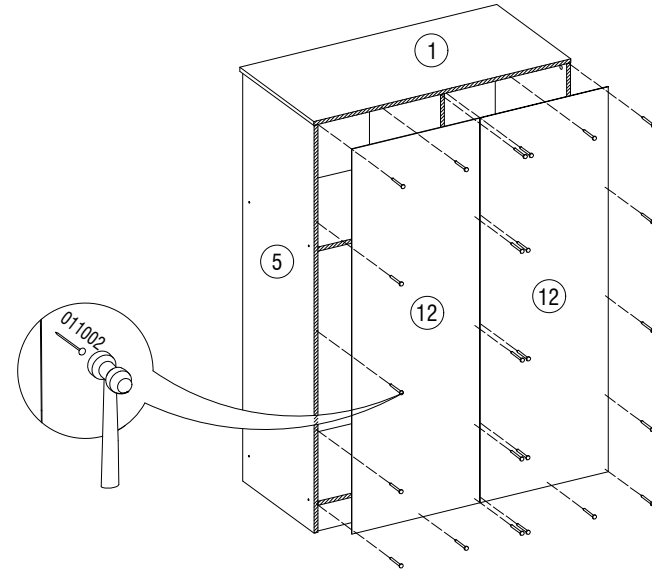

6

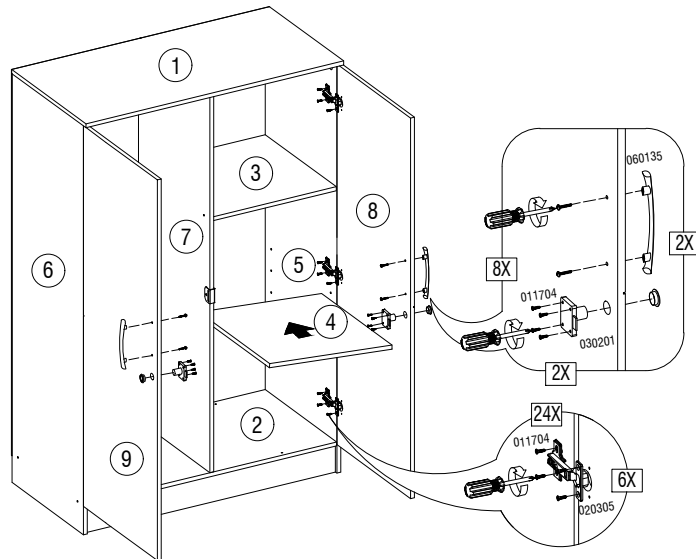

8

