








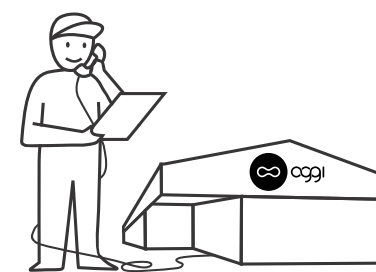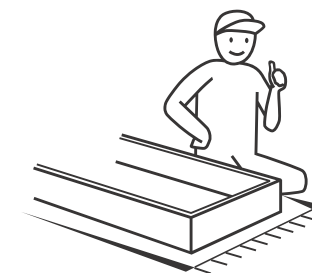

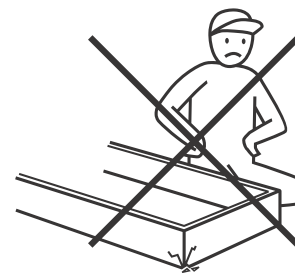

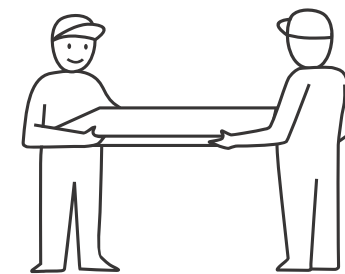





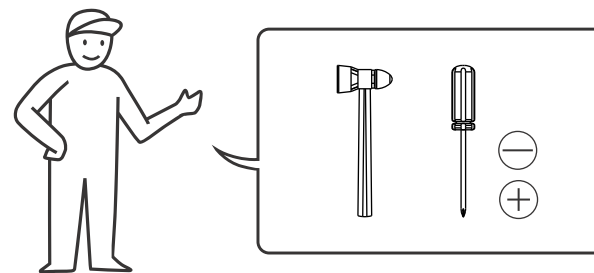





ASSEMBLING INSTRUCTION







VERNA WARDROBE 3DM







WHITE

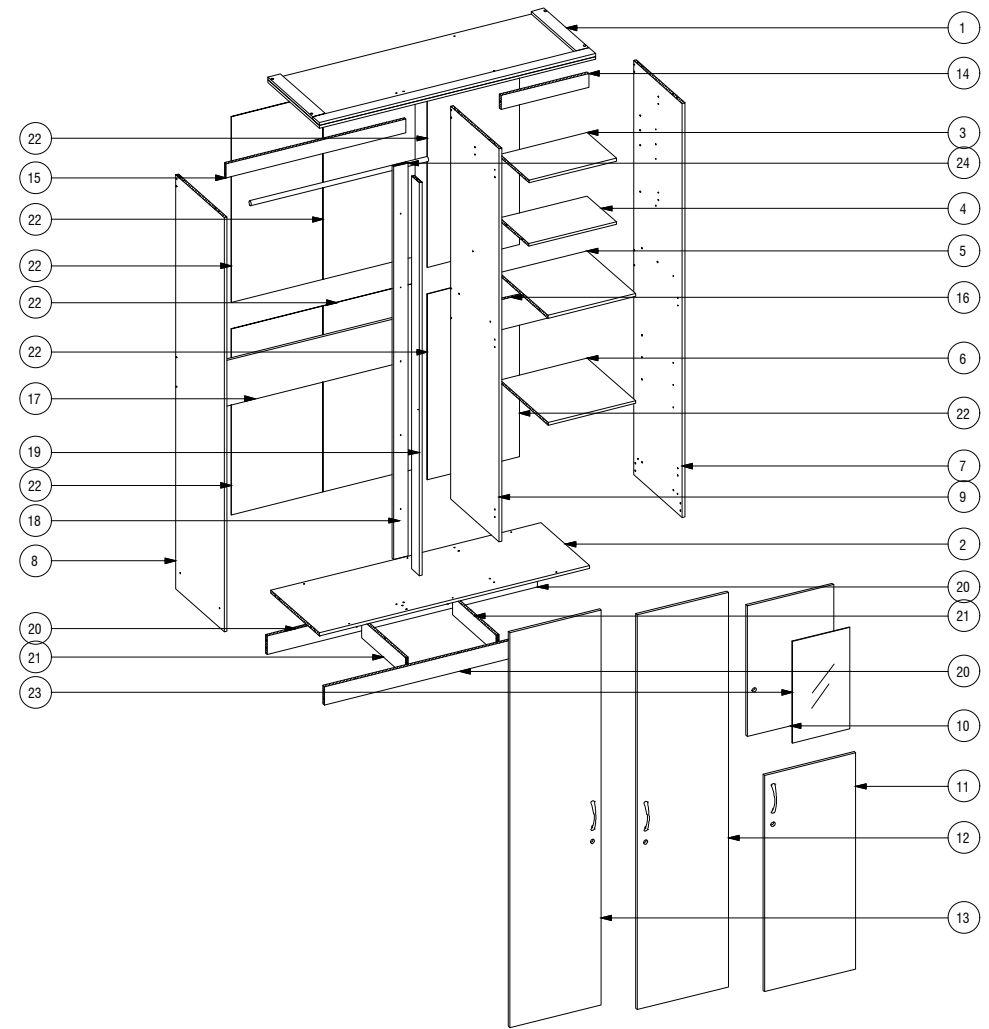






011402  30 X 100905 4 X	011601  11 X 020306 3 X	010501  41 X 020304 2 X	050402  8 X 020305 5 X	050301  2 X 030201 4 X	011707  20 X 060135 3 X
050503  4 X	011704  70 X 011001 5 gr	010801  3 X 050302 1 X	010701  3 X 090101 1 X	090701  4 X	100901  2 X
011002  12 gr	011001  5 gr	050302  1 X	090101  1 X		




010801  3 X	090701  2 X	011704  Ø6 X 1/2" 2 X	011402  20 X	011601  Ø6 MM X 1 1/2" 6 X	010501  32 X
--	--	--	--	---	---

011402  10 X	011601  Ø6 MM X 1 1/2" 5 X	010501  9 X	100905  4 X	011707  Ø6 X 5/8" 20 X	100901  2 X
--	---	--	--	---	--


010701  3 X
--

090101  1 X	050302  1 X	090701  2 X	011704  Ø6 X 1/2" 4 X
--	--	--	--


1

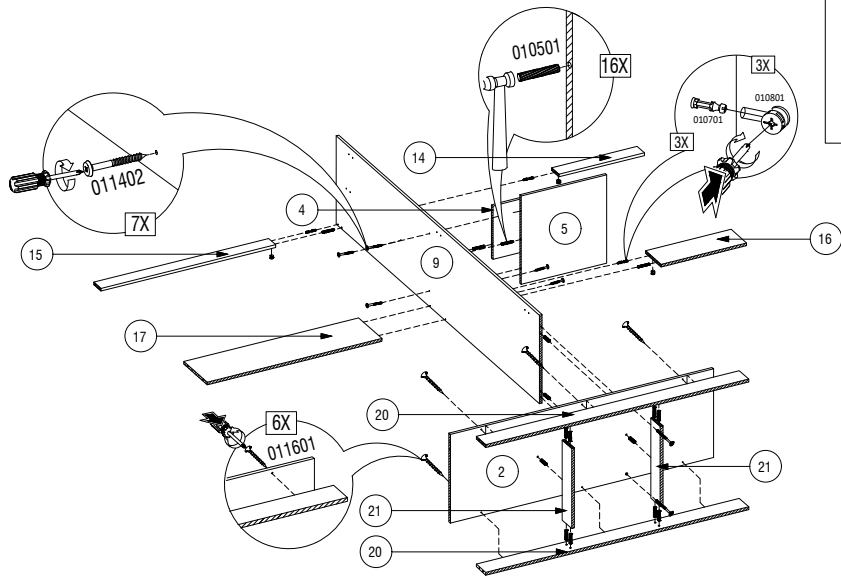


2

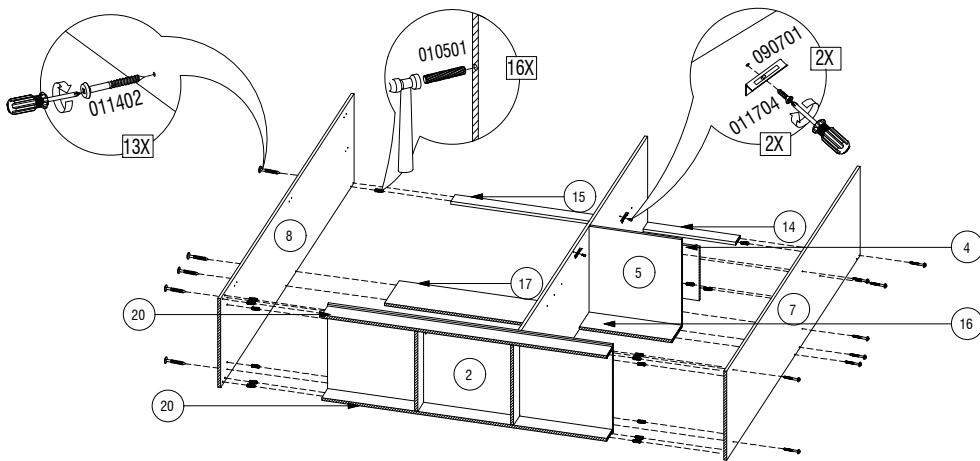

3

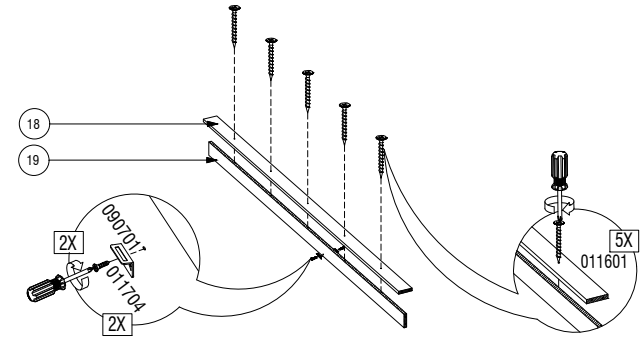

4

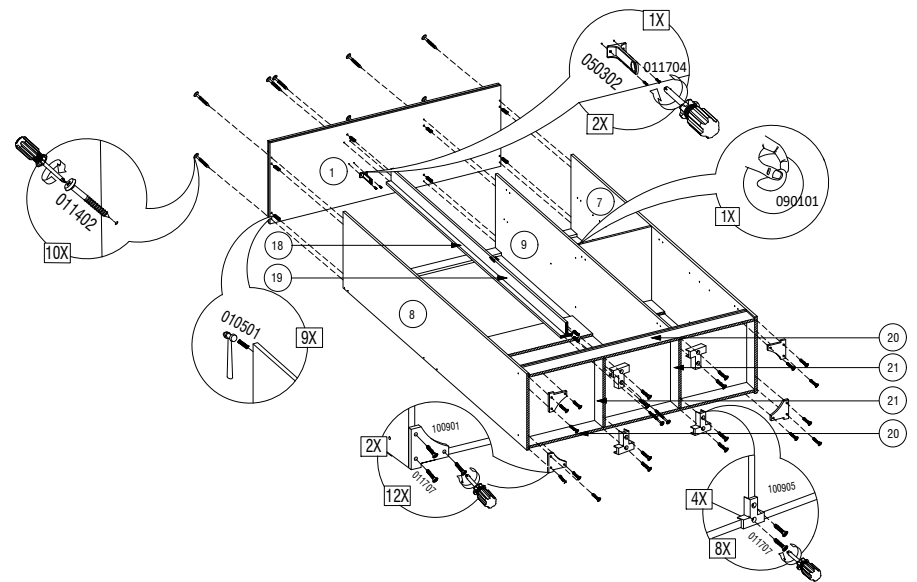

011704





020306

020304

020305

030201

060135



Ø6 x 1/2" 64 X

3 X

2 X

5 X

4 X

3 X

050503

050402



4 X


8 X

050301




2 X


5

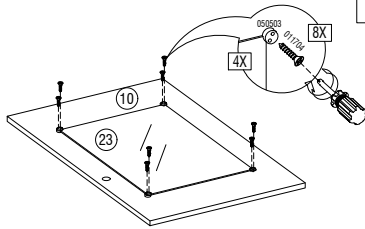


7

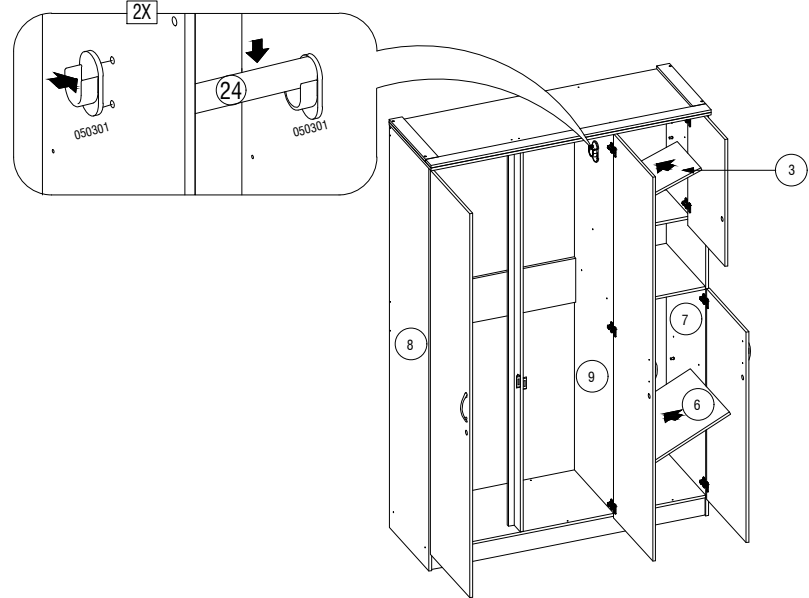


6

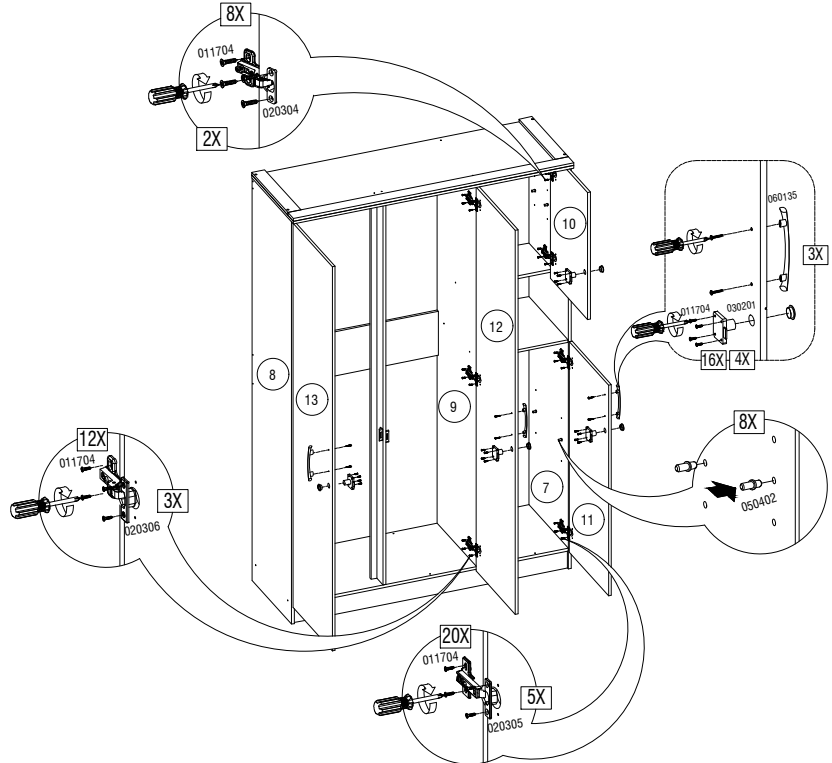


8

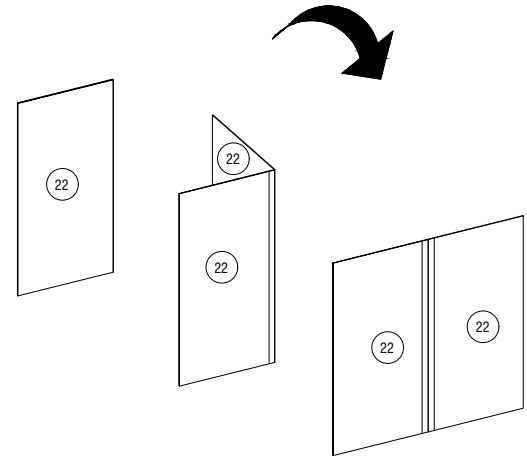

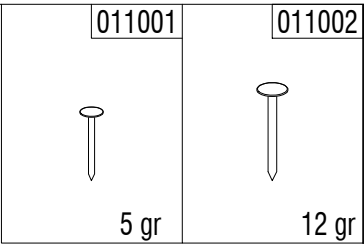

9

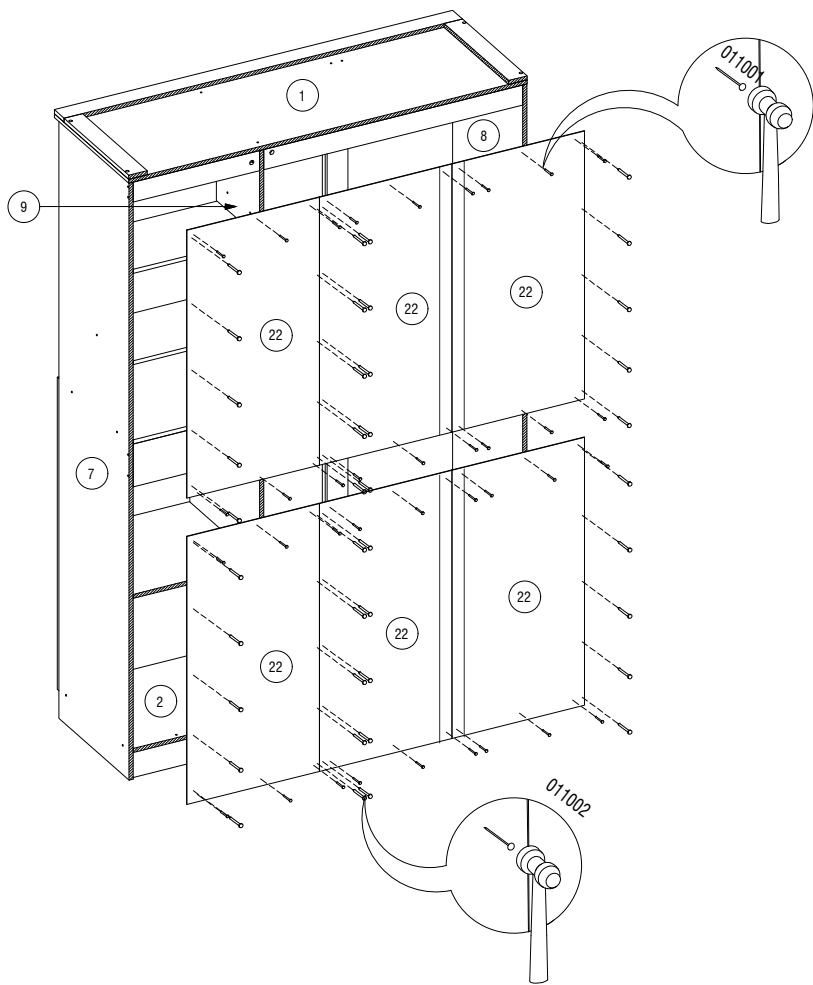

10

